




WOOD

Corn Cutter & Creamer

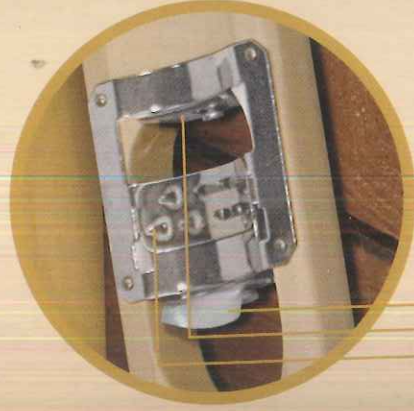

**Blade
Scraper
Shredders**

Instructions for Use

For Cream Style:

1. Loosen the screw underneath to adjust the cutting blade height. Lower it all the way down or just high enough to slice the tips of the kernels.
2. Position the cutter over a pan with the long end against a hard surface that can be used as a backstop. Another option is to lean the long end down into a large deep pan.
3. Using a fresh uncooked ear of corn, place it in the groove with the small end forward. Holding your fingers on top of the ear, away from the blades, push the cob across the cutting mechanisms with a quick motion that runs the full length of the cutter. The juices are released when the shredders puncture the kernels and the scraper uniformly removes the kernels from the cob, leaving the skin.
4. Rotate the cob and repeat. Thoroughly scrape the ear, repeating areas if necessary, to release all of the juices but leaving the skin of the grain.

For Cutting Only:

1. Loosen the screw underneath to adjust the cutting blade to full height and then tighten.
2. Place a fresh ear of corn (small end forward) in the groove and push forward with a quick full motion against the blade, keeping your fingers safely on top of the cob. Rotate the cob and repeat but do not go over the same areas more than once.