


## INSTALLATION

Installing the SmokePistol™ is a matter of hanging the SmokePistol™ on your grill or smoker with the barrel inserted into a hole (1/2" diameter or greater). It should be placed near the bottom or at least on the lower half of your grill or smoker. Position so that the SmokePistol™ will not blow smoke directly onto food. Many smokers and grills have existing vent holes that can be used. Locate an existing vent hole or drill a 1/2" diameter hole in the side of your grill or smoker. Place the SmokePistol™ against the wall of the grill with the barrel in the vent hole and mark the top of the SmokePistol™ hanging hole. Insert the mounting screw into the wall of the grill so that the SmokePistol™ hangs with the barrel in the vent hole.

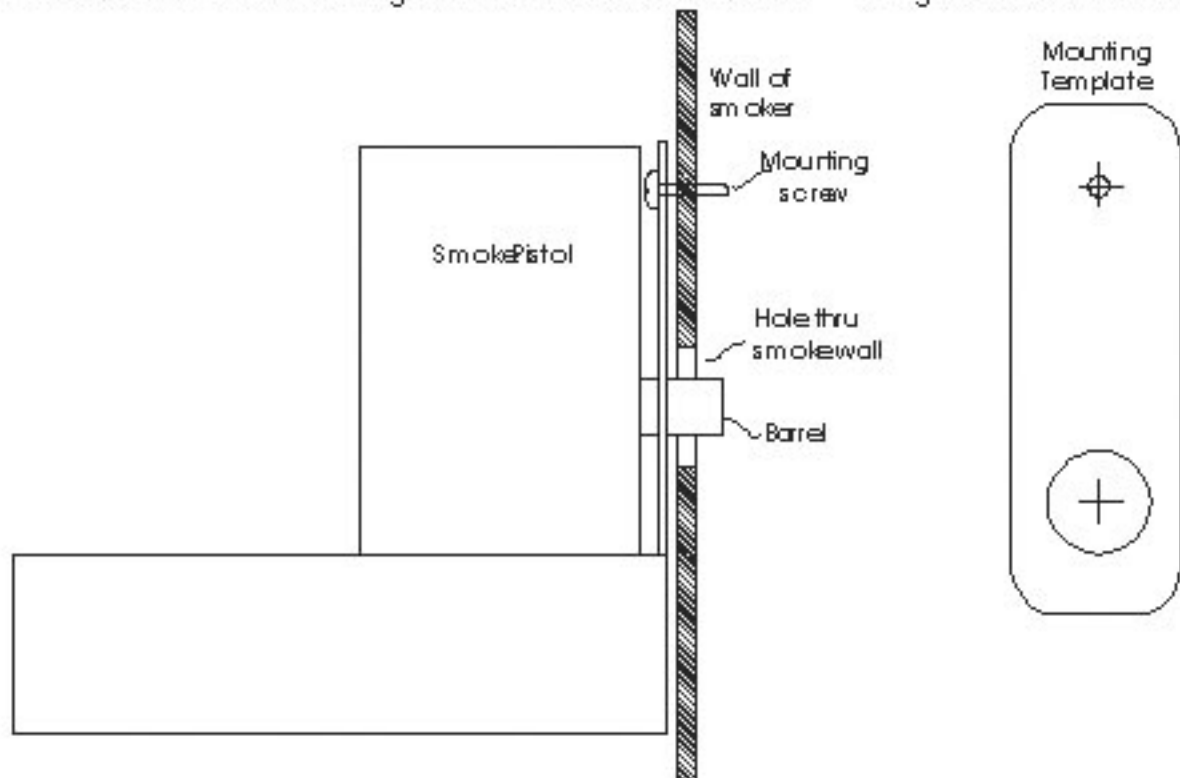

### Tips for Using Your SmokePistol™

1. Always clean the SmokePistol™ before each use, especially the barrel which will acquire a buildup of soot.
2. Do NOT leave the SmokePistol™ attached to your BBQ grill when the heat is high because excessive will damage internal parts (use the remote SmokePistol™ for high heat applications). Smoking temperature should be around 190- 225 degrees F.
3. When starting a new cartridge make sure the smoke control knob is set near low until the SmokePistol™ starts smoking profusely. This takes about 5 minutes and tapping on the chamber with a metal object like a screwdriver will help the wood chips fall and speed things along.
4. Do not use excessive smoke. It doesn't make food smoke faster and wastes the wood cartridges. A small, steady stream of smoke is all that is necessary unless you have a very large smokehouse. Your cartridges should last between 2-4 hours.
5. After the SmokePistol™ is fully smoking, set the smoke control knob as desired. Continue to make smoke output adjustments until to smoke output is at a desired level. Remember to wait a couple of minutes between adjustments. The Burst button will increase the smoke to maximum.
6. If the smoke stream dies down, tap on the chamber with a metal object like a screwdriver, and make sure the barrel is unobstructed using the cleaning rod. Do this before inserting a new cartridge to be sure you have used all the wood in the old cartridge. Use the BURST button to get the smoke going again.
7. When you are finished smoking, remove the old cartridge only after all smoke has ceased. You should remove the cartridge before it is allowed to completely cool as it may stick when cold. Be careful of smoldering embers.
8. Keep new cartridges in a dry environment. Excessive humidity or moisture will make them difficult to light.