 
 


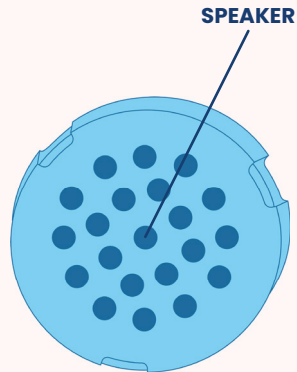

Mini-Me®

www.Voice.Gift


Give a voice to your favorite plush toys and furry friends, make pillows more musical or give a special quilt a special message. Add multiple messages, up to 60-seconds of audio to gifts, crafts and costumes — or anything else you want to bring to life with sound. Press it, hug it, squeeze it. Make gifts and crafts speak and sing! It's called the Mini-Me so you can put a little bit of you into anything you gift or make.

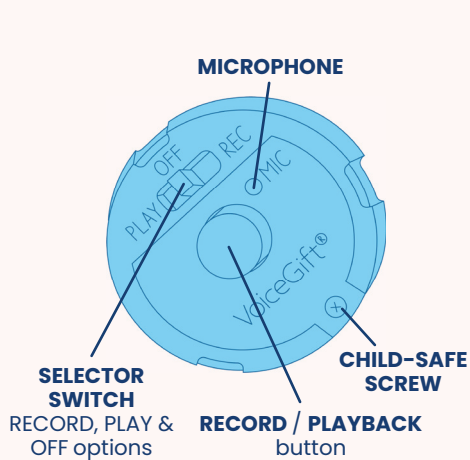

INCLUDES:


- 3 - LR44 batteries

1 Record

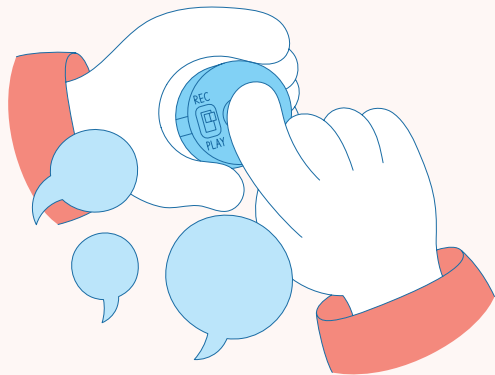


To record, slide the selector switch to the **REC** position. Press and hold the button. Recording begins when you hear the beep. Speak, sing or record music from a speaker. Release when you're finished recording. For additional messages, press and hold the button again. You can record as many messages as you like, up to 60 seconds.

2 Preview & Play

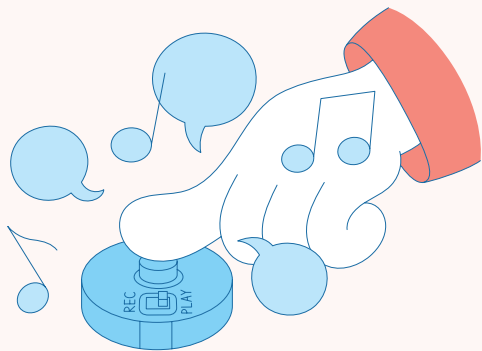

To listen back, slide the selector switch to the **PLAY** position and press the button. Press it again to hear any other messages you have recorded. If you're happy, you're done! Remember: you can always re-record at any time. To adjust the recording quality, try talking louder/softer or holding the device closer/further away from your mouth or speaker.


3 Stuff It & Stitch It

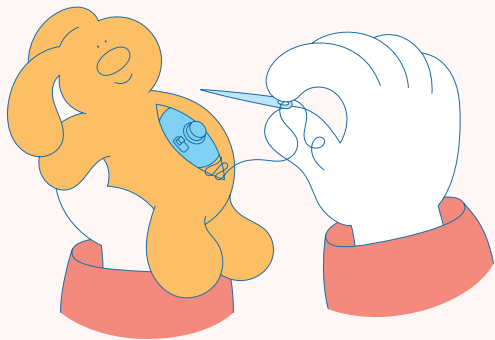

Bring furry friends to life! Make plush toys and stuffed animals speak, sing or squeak out sound effects when they're hugged and squeezed. Add a personal message to a quilt, have a family hand-me-down preserve a special memory, put it in a favorite pillow, or keep babies and toddlers entertained with sound by sewing it into an activity blanket. Add the Mini-Me to a Halloween costume or for dress up, letting kids roar like a lion or dinosaur, have a princess soundtrack play, or add superhero sound effects.

Squeeze It,
Hug It,
Press It,
Play It.



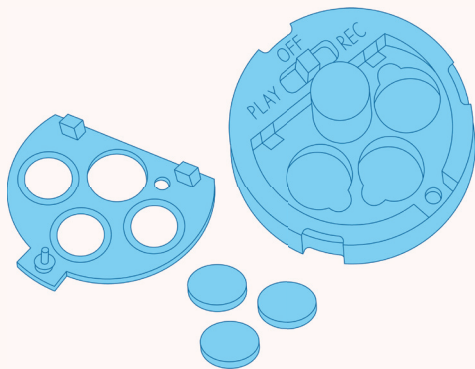

Slide the selector switch to the OFF position when not using for a long time, when you travel or for quiet time.

The Mini-Me is powered by 3 LR44 batteries and will play messages over 500 times under typical usage. To replace the batteries, use a Phillips screwdriver to unscrew the child-safe screw and remove all the batteries. Replace with fresh batteries making sure that positive (+) side is facing up.

Check out a how-to video and discover the many creative ways people are using their voice with Mini-Me by scanning the QR code below. This item is not a toy. Not for children under 3 years.



Visit us online at www.voice.gift
Send a message to hi@voice.gift
Follow us [@voicegift](https://www.instagram.com/voicegift)



Voice Express Corp.
606 Post Road East
Suite 3-706
Westport, CT 06880

VoiceGift and Mini-Me are registered
trademarks of Voice Express Corp.

