



Laser BLE installation guide on Windows 11

Windows 11 Driver and Software Installation Guide for Wainlux Lasers


Follow these 12 easy steps to install the necessary driver and software for your Wainlux laser on your Windows 11 PC.

Step 1:

Open File Explorer and navigate to the **D** drive on your PC.

Step 2:

Inside the **D** drive, locate and open the **01 Windows** folder.

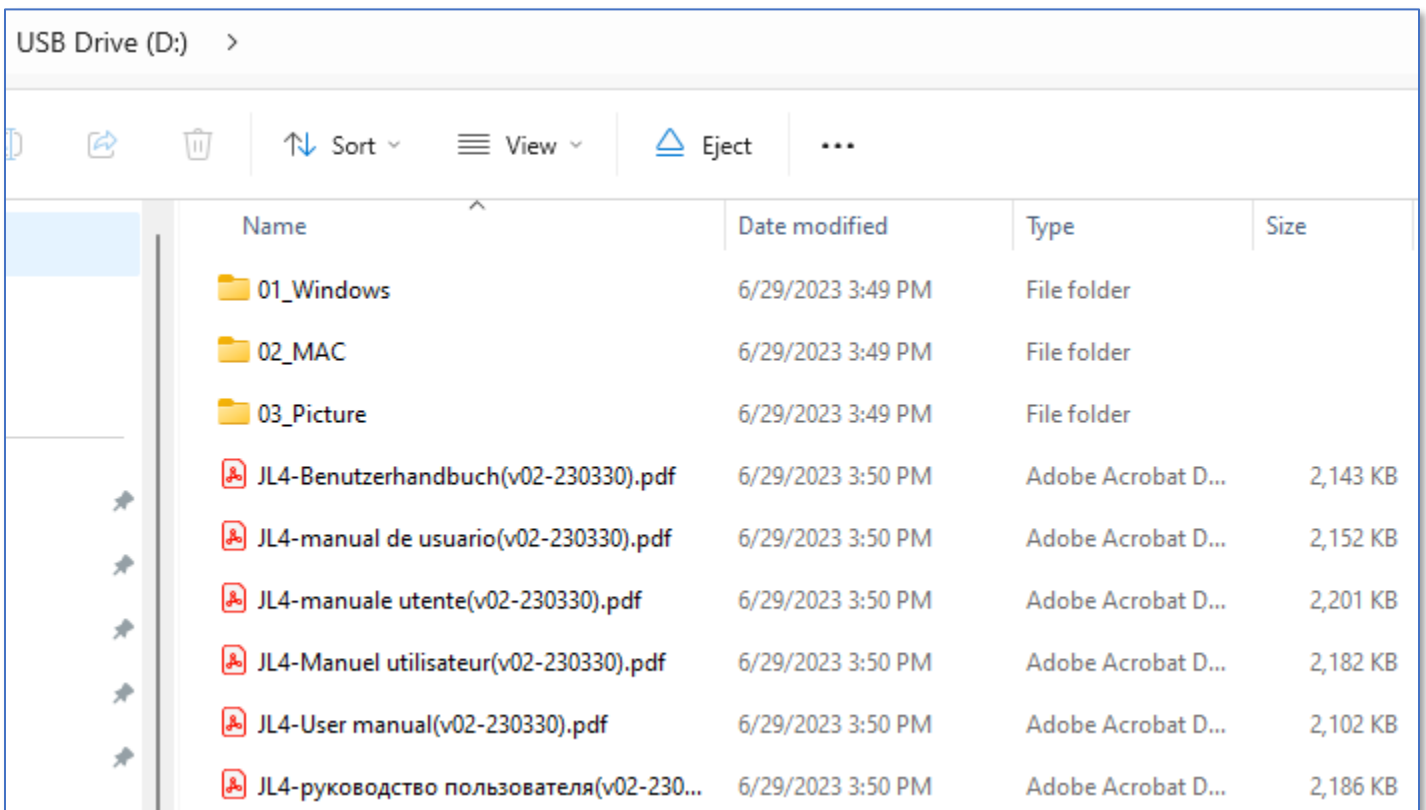




Laser BLE installation guide on Windows 11


Step 3:

Within the [01 Windows](#) folder, find and select the [Driver](#) folder.

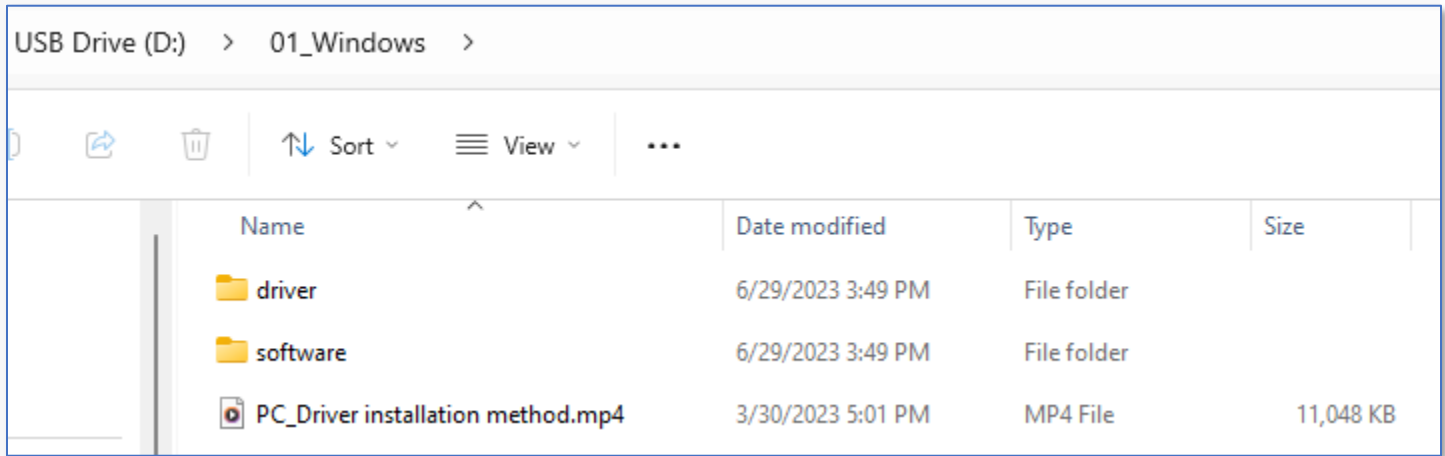

Step 4:

Inside the [Driver](#) folder, locate the file named [CH341SER\(v3.7\).EXE](#) and select it.

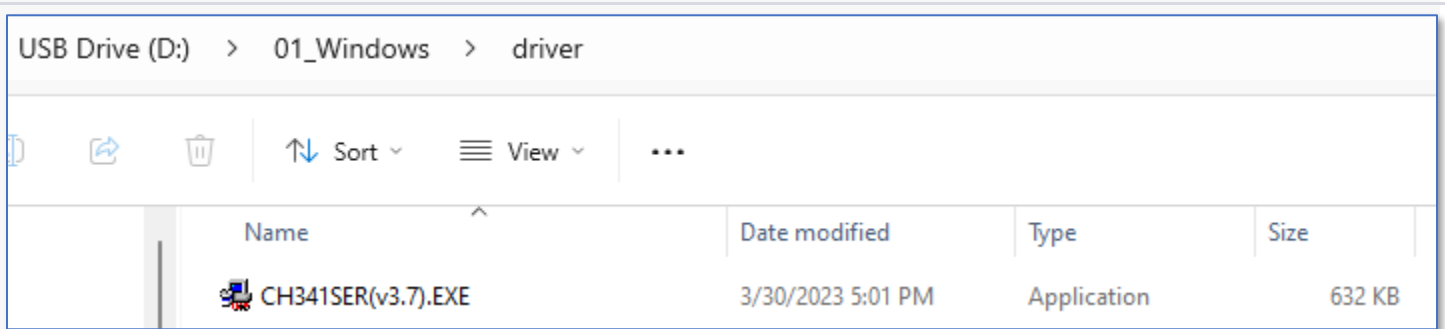




Laser BLE installation guide on Windows 11


Step 5:

Click on the [install](#) icon within the CH341SER installer.

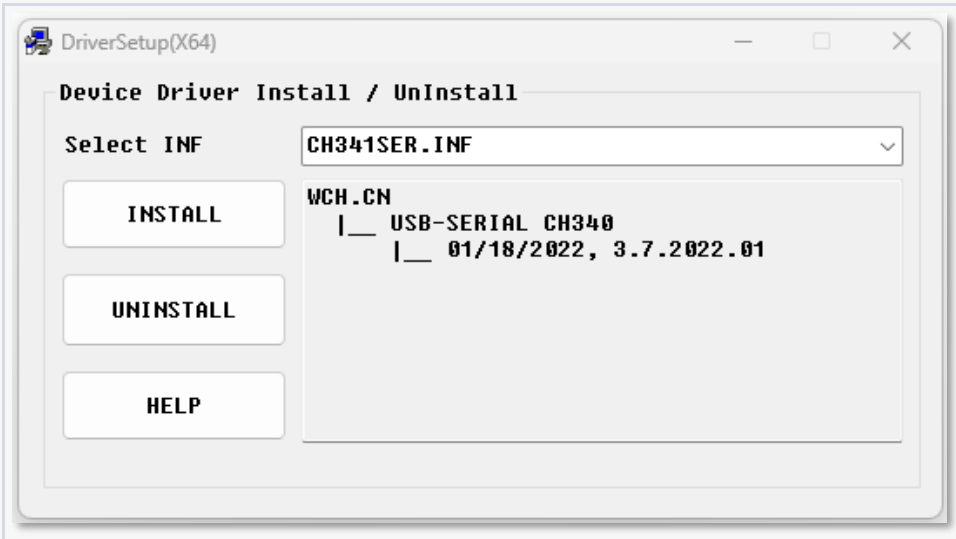

Step 6:

If the installation is successful, you will see a message on your screen that says, "The driver successfully pre-installed in advance." Select [OK](#) to continue.

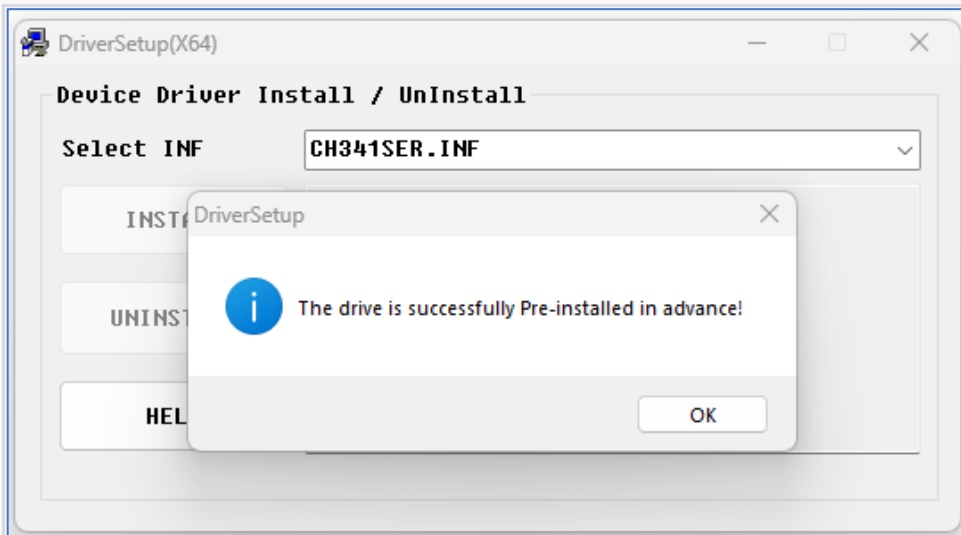

Step 7:

Close any pop-up windows by clicking the [red X](#) in the upper right corner.



Laser BLE installation guide on Windows 11

Step 8:


Navigate back to the previous folder by selecting the [back arrow](#) located in the top left corner of your screen.

Step 9:

Within the [01 Windows](#) folder, locate and open the [software](#) folder.

Step 10:

Inside the [software](#) folder, find and select the file named [Laser_ble_64_v2.1.9](#).

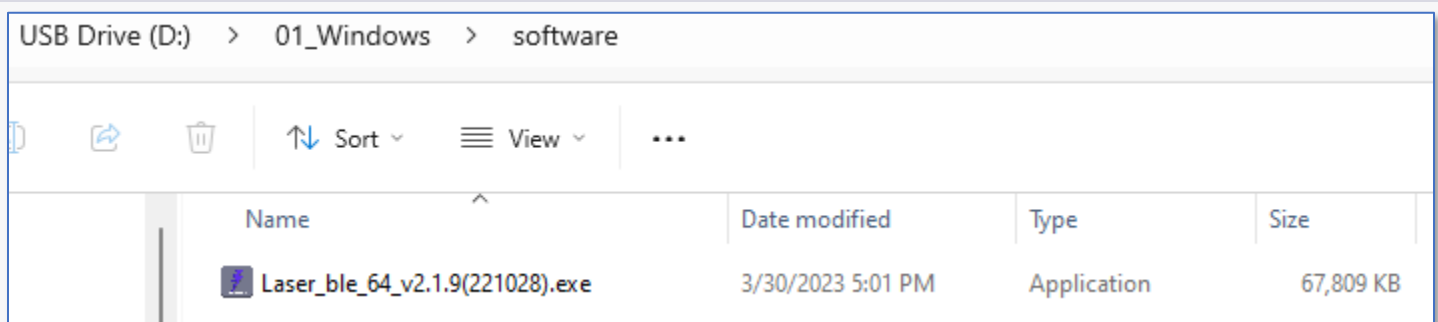


Step 11:

A window with Chinese script may appear on your screen. No action is needed; simply let the script run its course.

Step 12:

Once the script has completed, you should see the "Laser BLE" icon on your home screen, indicating successful installation.

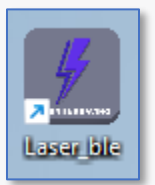

Congratulations! You have now successfully installed the required drive and software for your Wainlux laser on your Windows 11 PC. You are ready to use your laser with your computer.