


SONNET BIG BUTTON PHONE

MODEL NO. P-581/P-582

Note: This telephone can be used on a flat surface or it can be mounted to a wall. If you chose to mount it, there is an additional step to take in order to keep the handset from falling off the cradle/base. Pick up the handset and there is a small square piece on the cradle/base below the hang up button. This piece should slide out and get flipped over. There is a flat plastic piece that will stick out to allow the handset to latch on so it does not fall off when mounted on the wall. The best method to flip the square piece is to use a flathead screwdriver to push it out. It may take some force to push it out but once it is out, it is easy to turn it around and slide back into place.

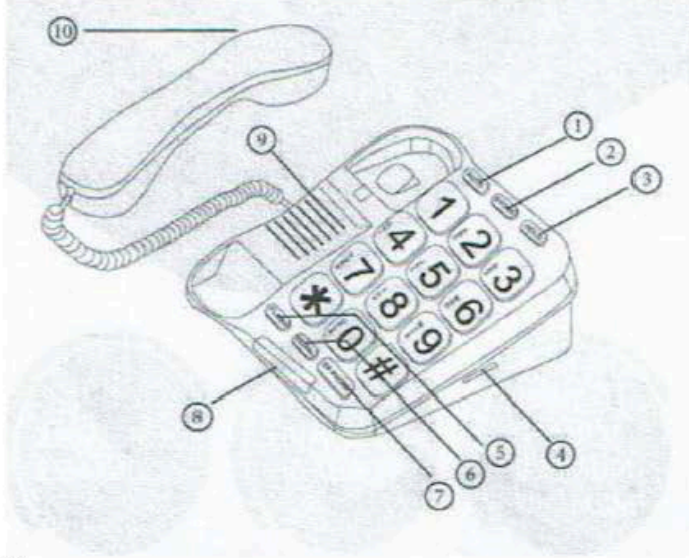

LOCATION OF CONTROLS

1. AUTO Button
2. STORE Button
3. HOLD Button
4. SP-PHONE Volume
5. FLASH Button
6. REDIAL Button
7. SP-PHONE Button
8. RINGER Indicator
9. RINGER Volume
10. HANDSET Volume

INSTALLATION:

1. Connect the coiled cord to handset and the telephone base.
2. Connect the telephone wire to the telephone jack and wall jack.

OPERATION:

RINGER VOLUME HI/LO SWITCH: To control the volume of the ringer.

SP-PHONE VOLUME HI/LO SWITCH: To control the volume of the hands-free.

RINGER INDICATOR: LED will flash when a call comes in.

RECEIVING A CALL: Pick up the handset or press SP-PHONE button when the phone rings. When your call is finished, put the handset back on the phone base or press SP-PHONE button again.

MAKING A CALL: Pick up the handset or press SP-PHONE buttons to hear the dial tone. Dial the number you wish to call. Hang up the handset or press SP-PHONE button again when your conversation is finished.

LAST NUMBER REDIALING: Pick up the handset or press the SP-PHONE button, then press REDIAL when you hear the dial tone.

FLASH FUNCTION: If you have subscribed to a call waiting service, the flash button replaces the hook allowing you to take the next call.

RINGER HI/LO SWITCHABLE: Select the volume of the tone ringer by the switch of MAX/MIN.

MUSIC ON HOLD: When talking on the phone, press HOLD button once. The caller will hear the music from your phone set and your call is in a holding state. To continue the phone call, just pick up the handset or press SP-PHONE button again.

STORING TELEPHONE NUMBERS: With the handset off the hook, press STORE button and then enter the number you want to store. Press AUTO button and then press 0-9 button for number location. When you have finished these steps, this number will have been stored.

TO SPEED DIAL FROM STORED NUMBER: Pick up the handset or press SP-PHONE button. Press AUTO and select correct memory location button 0-9 on the keypad. The telephone will automatically dial out the number.

IMPORTANT NOTES:

Telephone Connections: The voltage on the network is classified at TNV-3 (Telecommunication Network Voltages, as defined in the standard EN 60950). Following a power cut, the call in progress as well as the date and time settings will be lost.

Hearing Aid: Please note that this telephone works by sending radio signals between the base unit and the handset. These signals may interfere with some hearing aids, causing a humming noise.

SAFETY PRECAUTIONS:

- Do not allow handset to come into contact with liquids or moisture.
- Do not open the handset or base unit. This could expose you to high voltages.
- There is a slight chance that your product could be damaged by an electrical storm. We recommend that you unplug the product from the telephone socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is a gas leak.
- It is recommended that this product is not used near intensive care medical equipment or by persons with pacemakers.
- This product can interfere with electrical equipment such as answering machines, televisions, radios and computers if placed too close. We recommend that you position the base at least one meter from such appliances.