


Installation Instructions

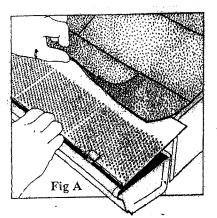


Shingle Overlap Installation (Fig. A)

This simple method requires no special tools. Just insert 3 provided plastic clips in each 4 foot length and follow steps 1 - 5.

Flat Installation (Fig. C)

When it's not possible to slide the guard under the shingle, fold the back edge up - in the same direction as the front rain dam. Each length is pre-scored in two places to insure an accurate fit.

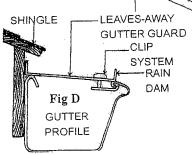

Flat Installation (Figs. C & D)

Make the back fold and insert 3 plastic clips per length, then follow steps

Fig C

- 1&2.
- 1. Hold back edge of guard while keeping it under the roof overhang.
- 2. Slide the gutter guard toward the front edge of the gutter until the plastic clips snap into place.

Shingle Overlap (Figs. A & B)

- 1. If the bottom row of shingles.
- 2. Slide the Leaves-Away up under shingles.
- 3. Pull Leaves-Away down over gutter.
- 4. Plastic clips click into place, engaging the 'return' of the roll-formed gutter.
- 5. You can butt the sections or overlap them about 1/2" along the line.



Crimping (Back folding - Fig. D) for flat installation only

To make the back fold, set up a folding jig using two 4 ft. lengths of straight lumber. Clamp together with a spacer between to allow the guard to slide in and out easily. Slide the guard in, up to the appropriate score, and fold down. Be sure to fold in the same direction as the rain dam.