

Square Display Cube Set

Assembly Instructions




PARTS LIST

Panel Pieces

- x4 15" x 12"
- x4 15" x 24"
- x4 15" x 30"
- x4 15" x 36"
- x4 15" x 15"

Hardware

- x48 Cam lock bolt
- x48 Cam lock nut



TOOLS NEEDED

Phillips head screwdriver

BEFORE YOU BEGIN:

Confirm all parts are accounted for and nothing is damaged from shipment.


TIP: Group rectangular pieces together by size for quick access

STEP 1:

- Gather the 4 upright panels and 1 square top panel for the first unit (*ok to start with any size unit*)
- Lay the 4 upright panels out flat with pre-drilled holes facing up


STEP 2:

- Insert cam locks into the 2 panels with the larger pre-drilled holes

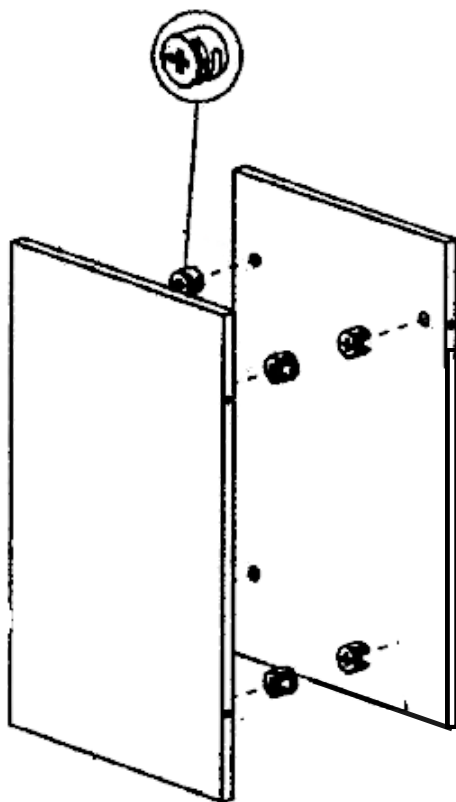


STEP 3:

- Thread the cam bolts into the smaller holes on the other 2 upright panels

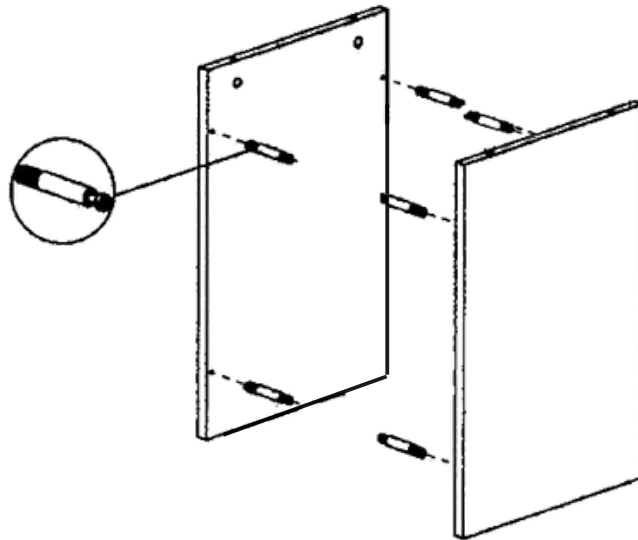


STEP 4:

- Insert the cam bolts into the edges of the cam lock panels

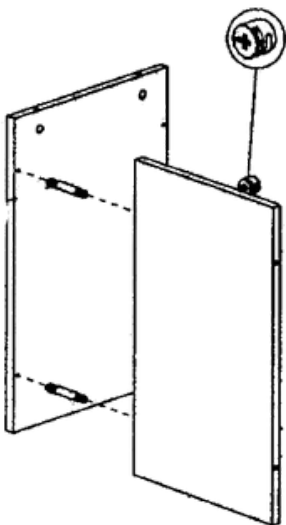

STEP 5:

- Turn the cam lock clockwise 90 degrees to lock in place

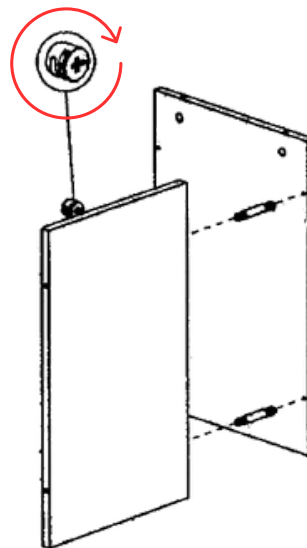


STEP 6:

- Repeat steps 4-5 to add the remaining 2 upright panels to the base


STEP 7:

- Insert cam locks into the remaining pre-drilled holes in the base panels (*along top on 2 sides*)

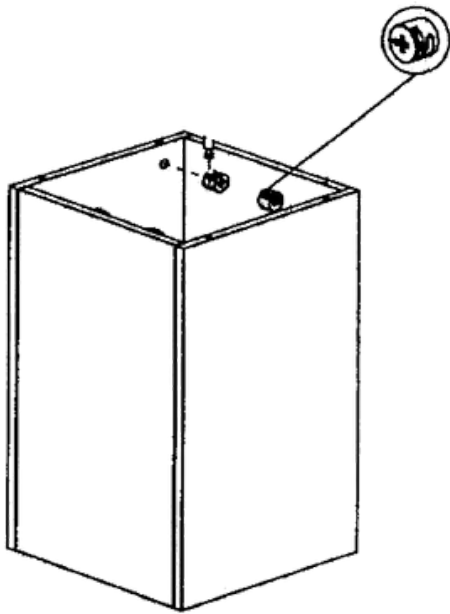


STEP 8:

- Lay 1 top square panel out flat with pre-drilled holes facing up
- Thread cam bolts into the pre-drilled holes in the top panel

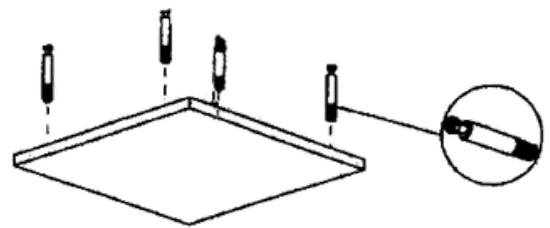

STEP 9:

- Flip the base upside down and insert cam bolts into top edges of base
- Turn the cam lock clockwise 90 degrees to lock in place
- Flip unit right side up

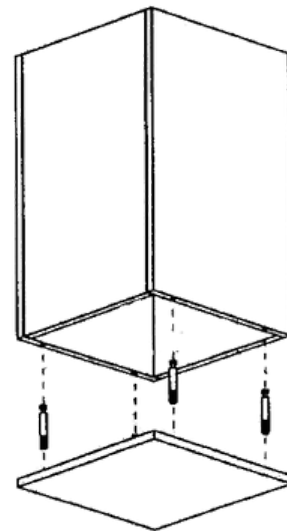

STEP 10:

- Repeat steps 1-9 to assemble the other 3 units