




Instructions for #2472

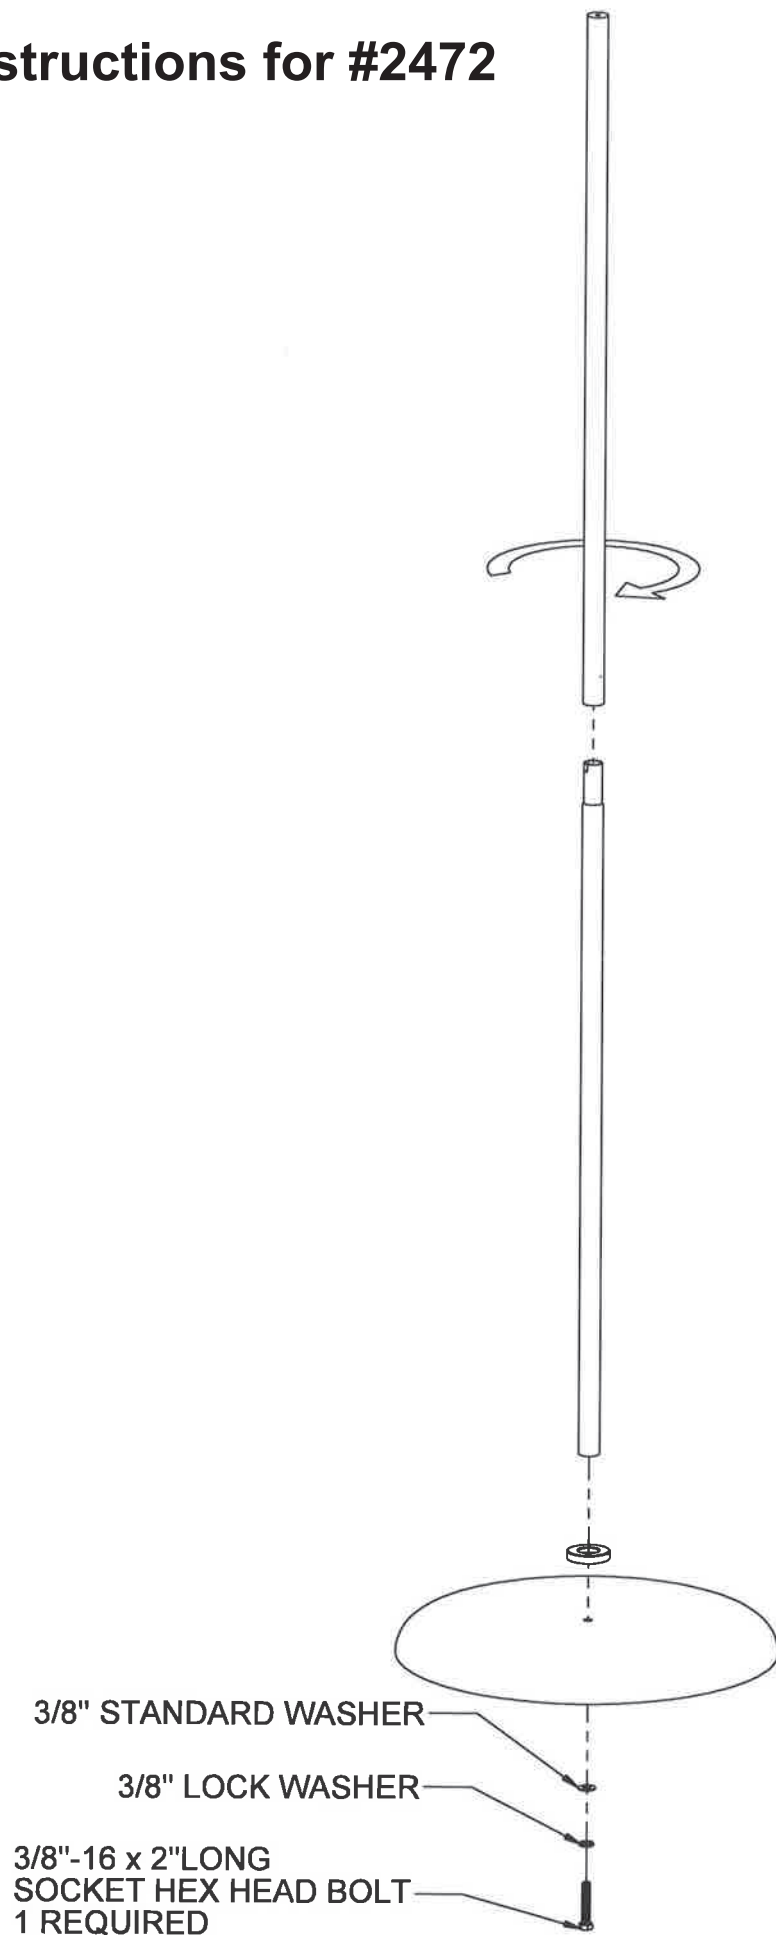

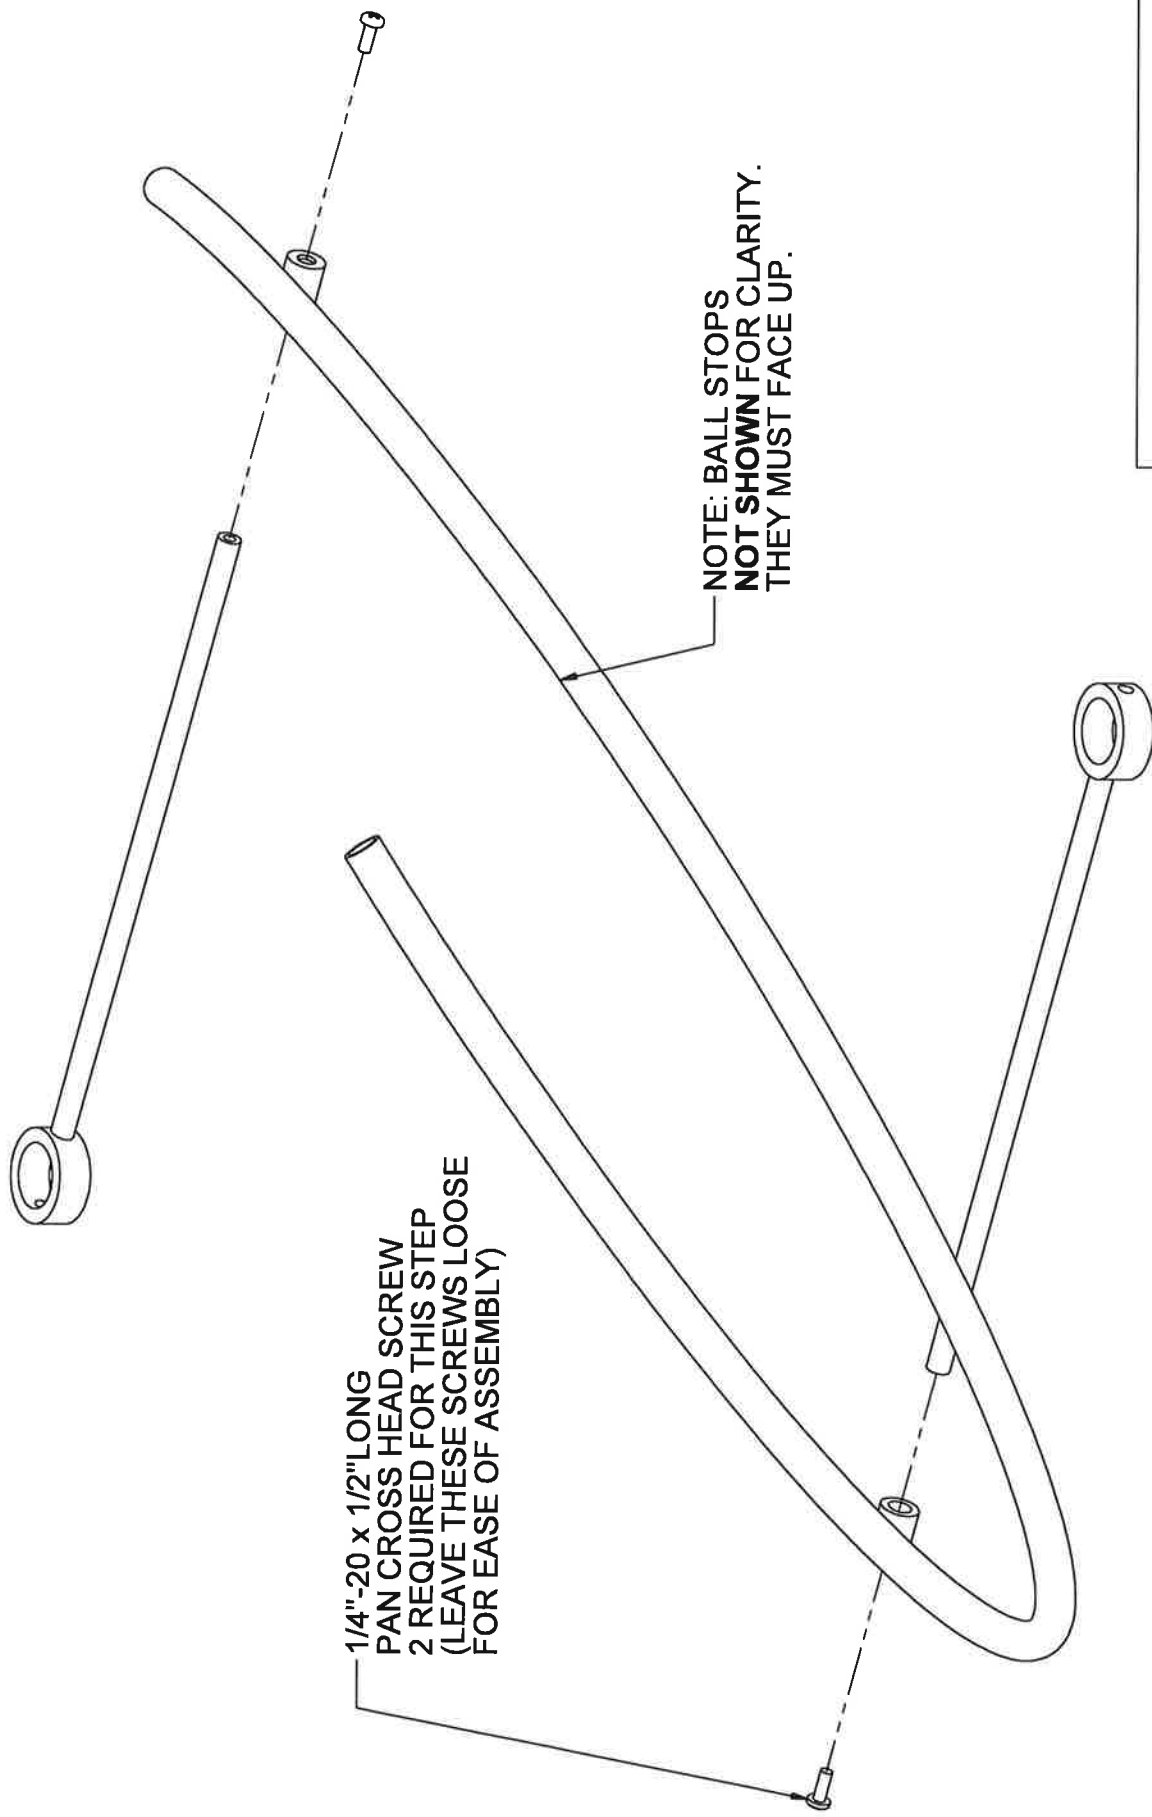


1/4"-20 x 1/2" LONG
PAN CROSS HEAD SCREW
2 REQUIRED FOR THIS STEP
(LEAVE THESE SCREWS LOOSE
FOR EASE OF ASSEMBLY)

NOTE: BALL STOPS
NOT SHOWN FOR CLARITY.
THEY MUST FACE UP.

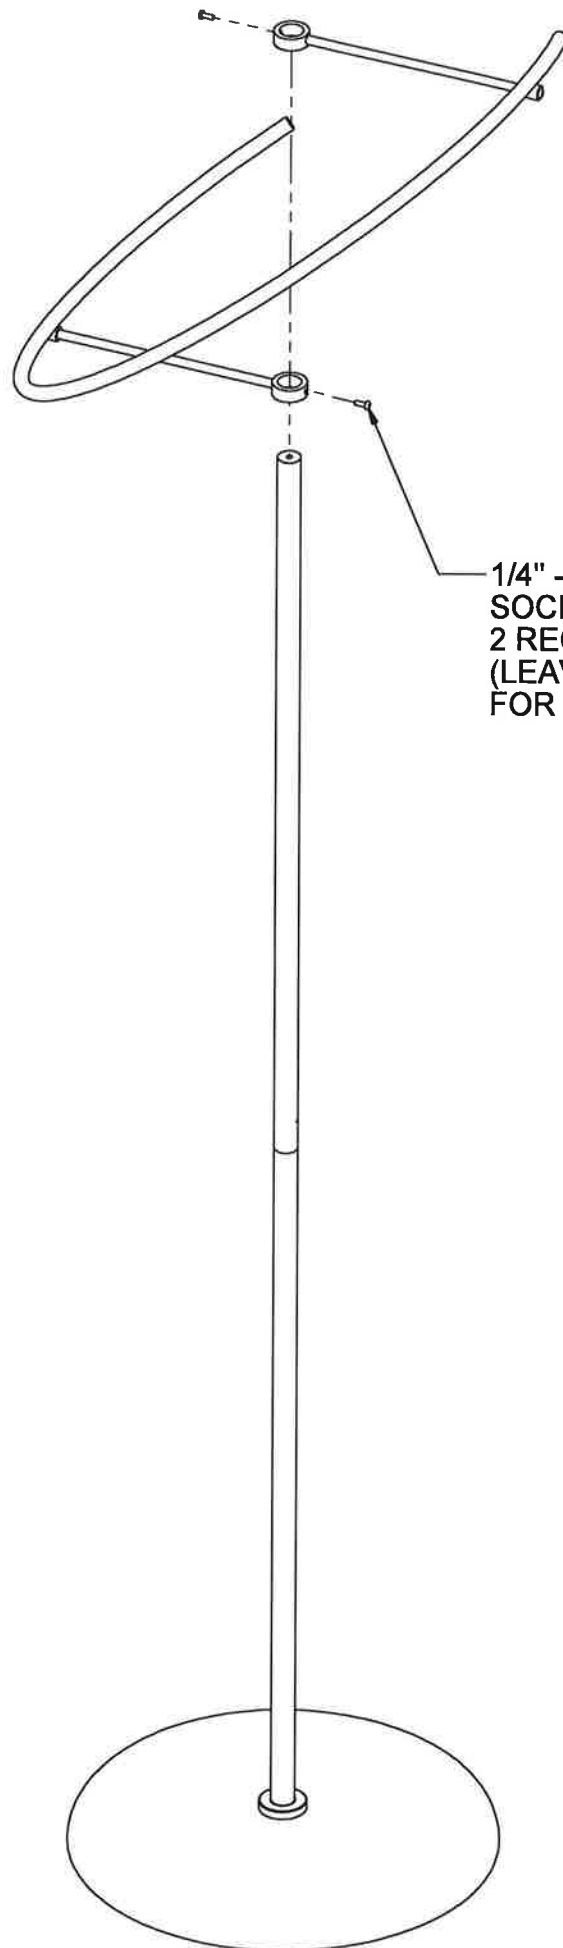

1/4" -20 x 1/4"LONG
SOCKET HEAD SET SCREW
2 REQUIRED FOR THIS STEP
(LEAVE THESE SCREWS LOOSE
FOR EASE OF ASSEMBLY)

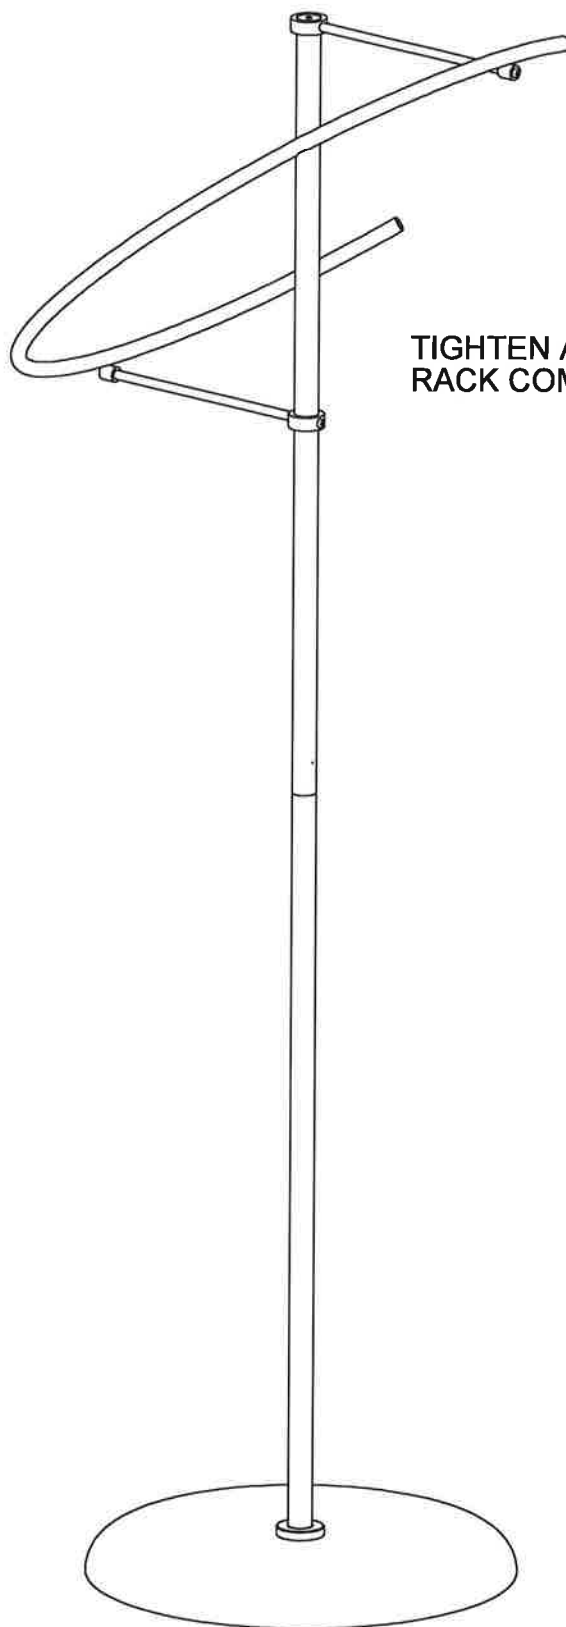

TIGHTEN ALL SCREWS TO FIX
RACK COMPONENTS INTO PLACE.