

9487 Assembly Instructions

Page 1 of 2

Assembly parts list:

C
NOSE PANELS
(QTY: 6)

B
FRAME
(QTY: 3)

N
PANEL
(QTY: 3)

A BASE (QTY: 1)

H CROWN SLEEVE (QTY: 3 EACH)

CLEAR PLASTIC

PRINTED PVC

D TOP LID (QTY: 1)

E NOSE PANEL BRK.
(QTY: 6)

MIRROR (QTY: 1)

G MIRROR BRK.
(QTY: 2)

N CROWN CORNER
(QTY: 3)

SCREW (QTY: 6)

HARDWARE

K SCREW (QTY: 6)

L SCREW W.
PLASTIC WASHER (QTY: 4)


SCREW (QTY: 12)

NUTS (QTY: 4)


M SCREW (QTY: 4)


PHILIPS SCREW
DRIVER (QTY: 1)

I PLASTIC CLIPS
(QTY: 12)

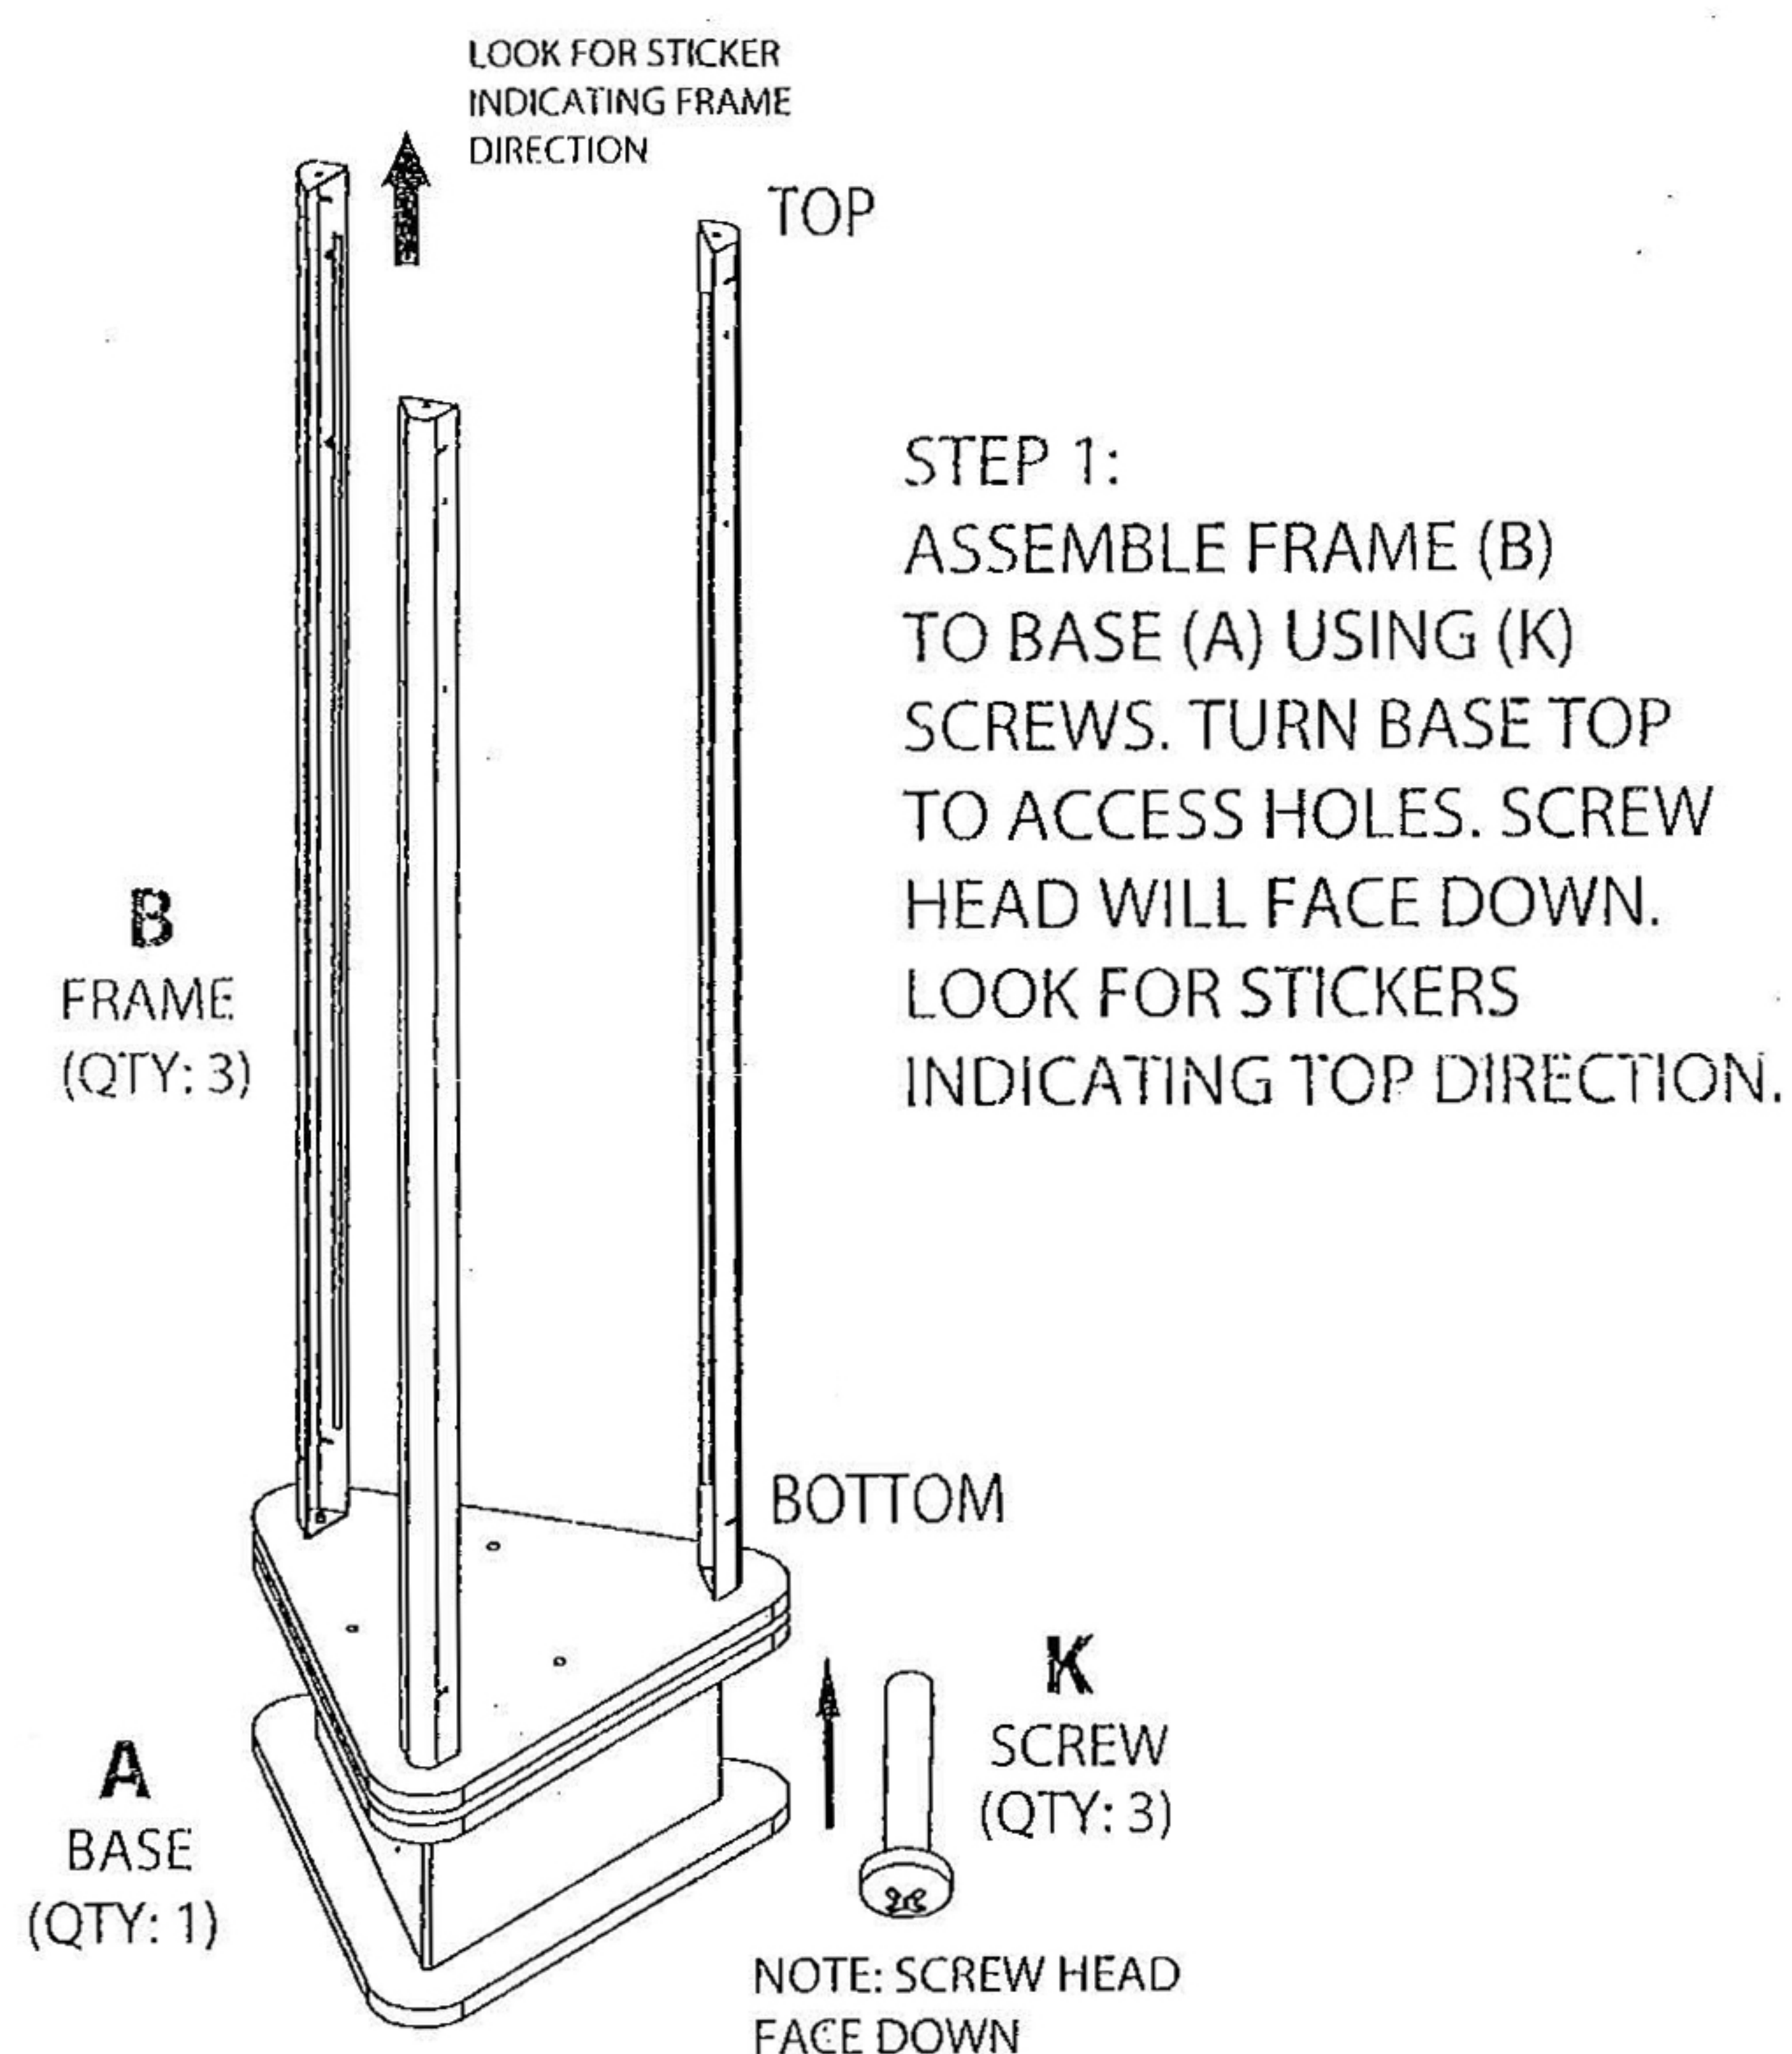


STEP 2:
INSERT PANELS (N) TO
CHANNELS LOCATED ON
FRAMES. ADD NOSE PANEL
BRK (E) TO KEEP
STRUCTURE TOGETHER.
FINALLY, FASTEN
PLASTIC CLIPS (I) TO
PANELS AND BRACKETS.

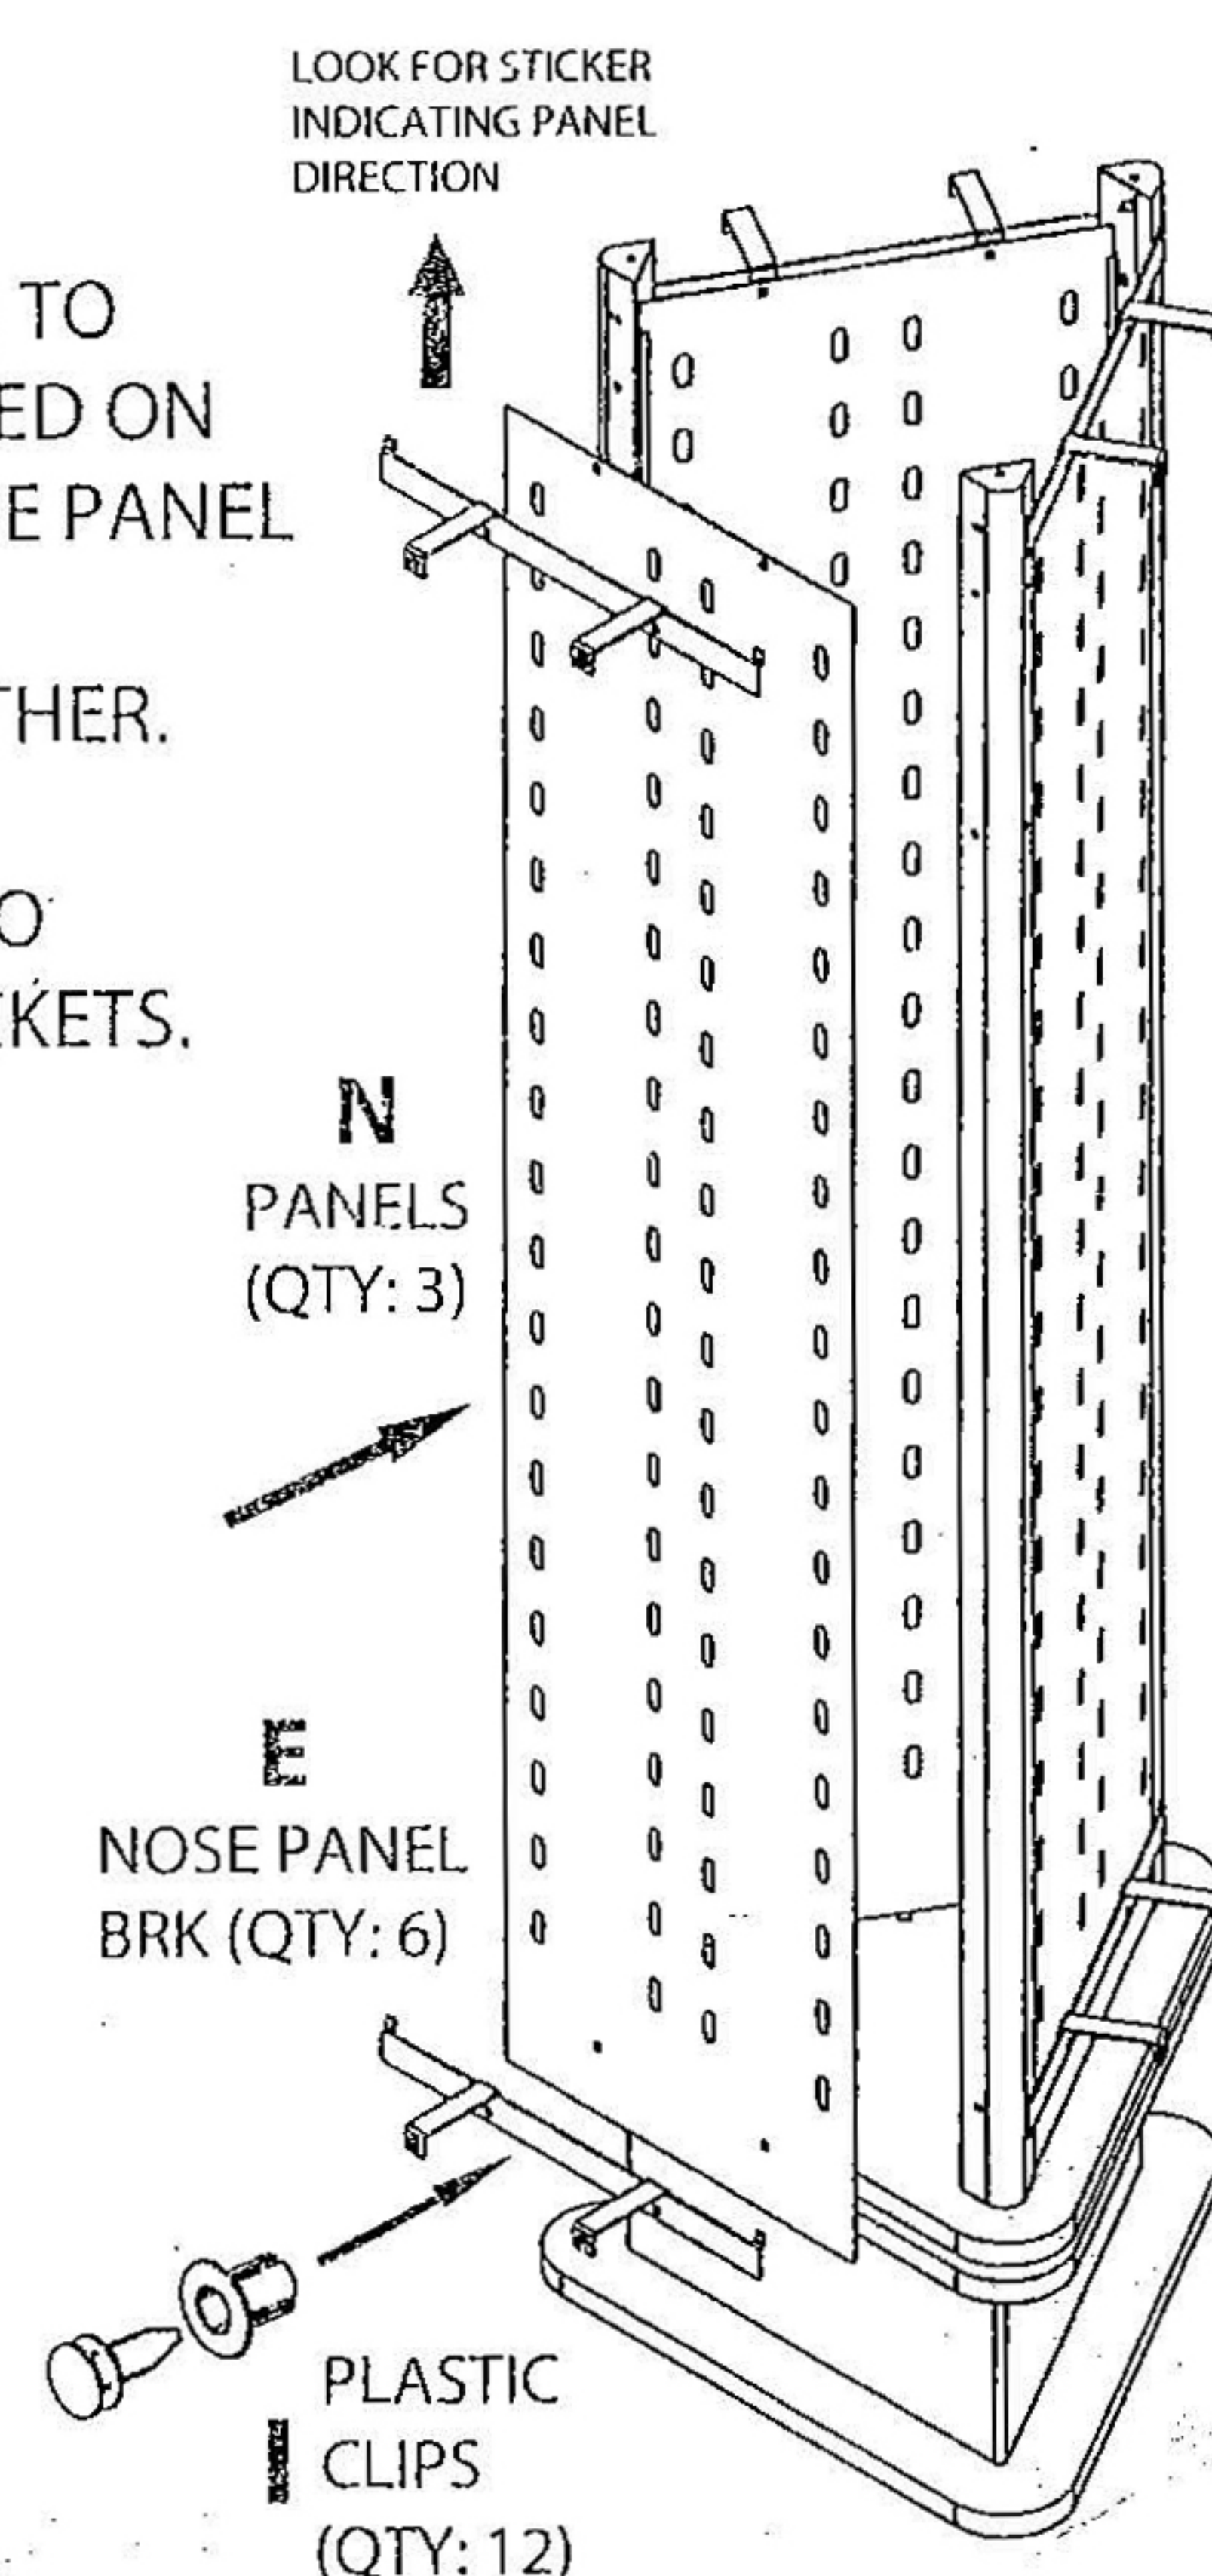


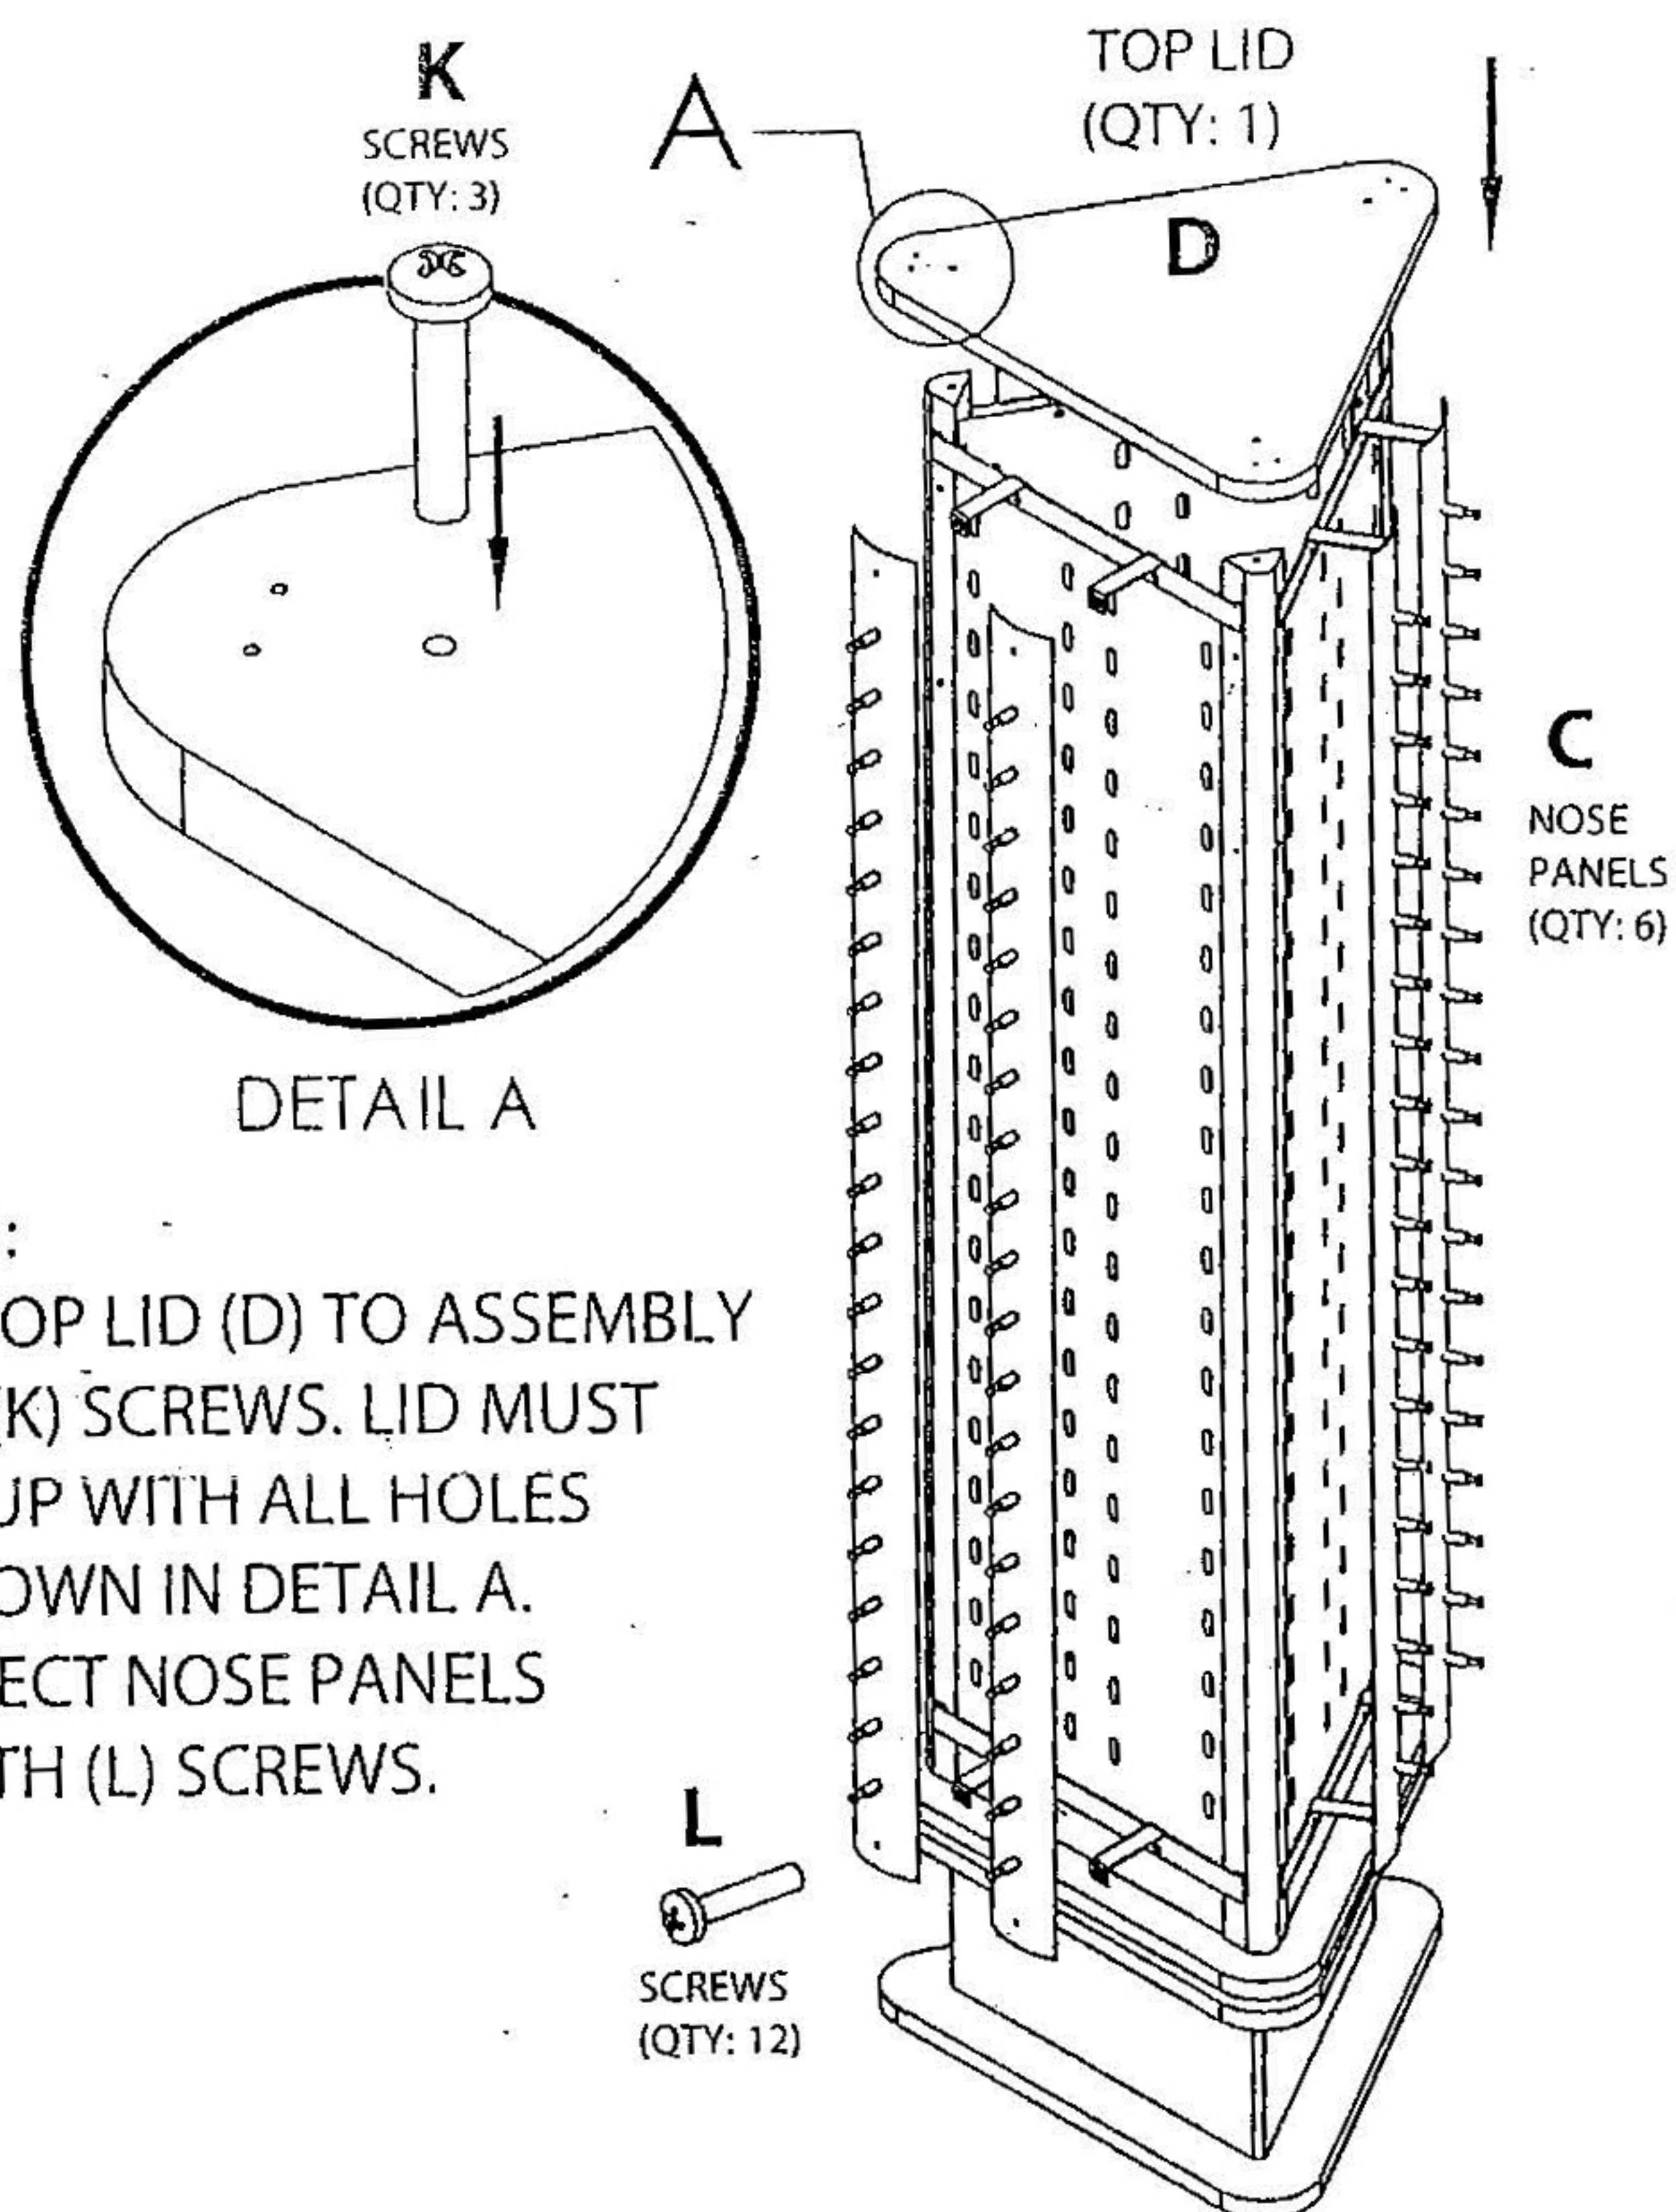


STEP 3:
ADD TOP LID (D) TO ASSEMBLY
WITH (K) SCREWS. LID MUST
FACE UP WITH ALL HOLES
AS SHOWN IN DETAIL A.
CONNECT NOSE PANELS
(C) WITH (L) SCREWS.

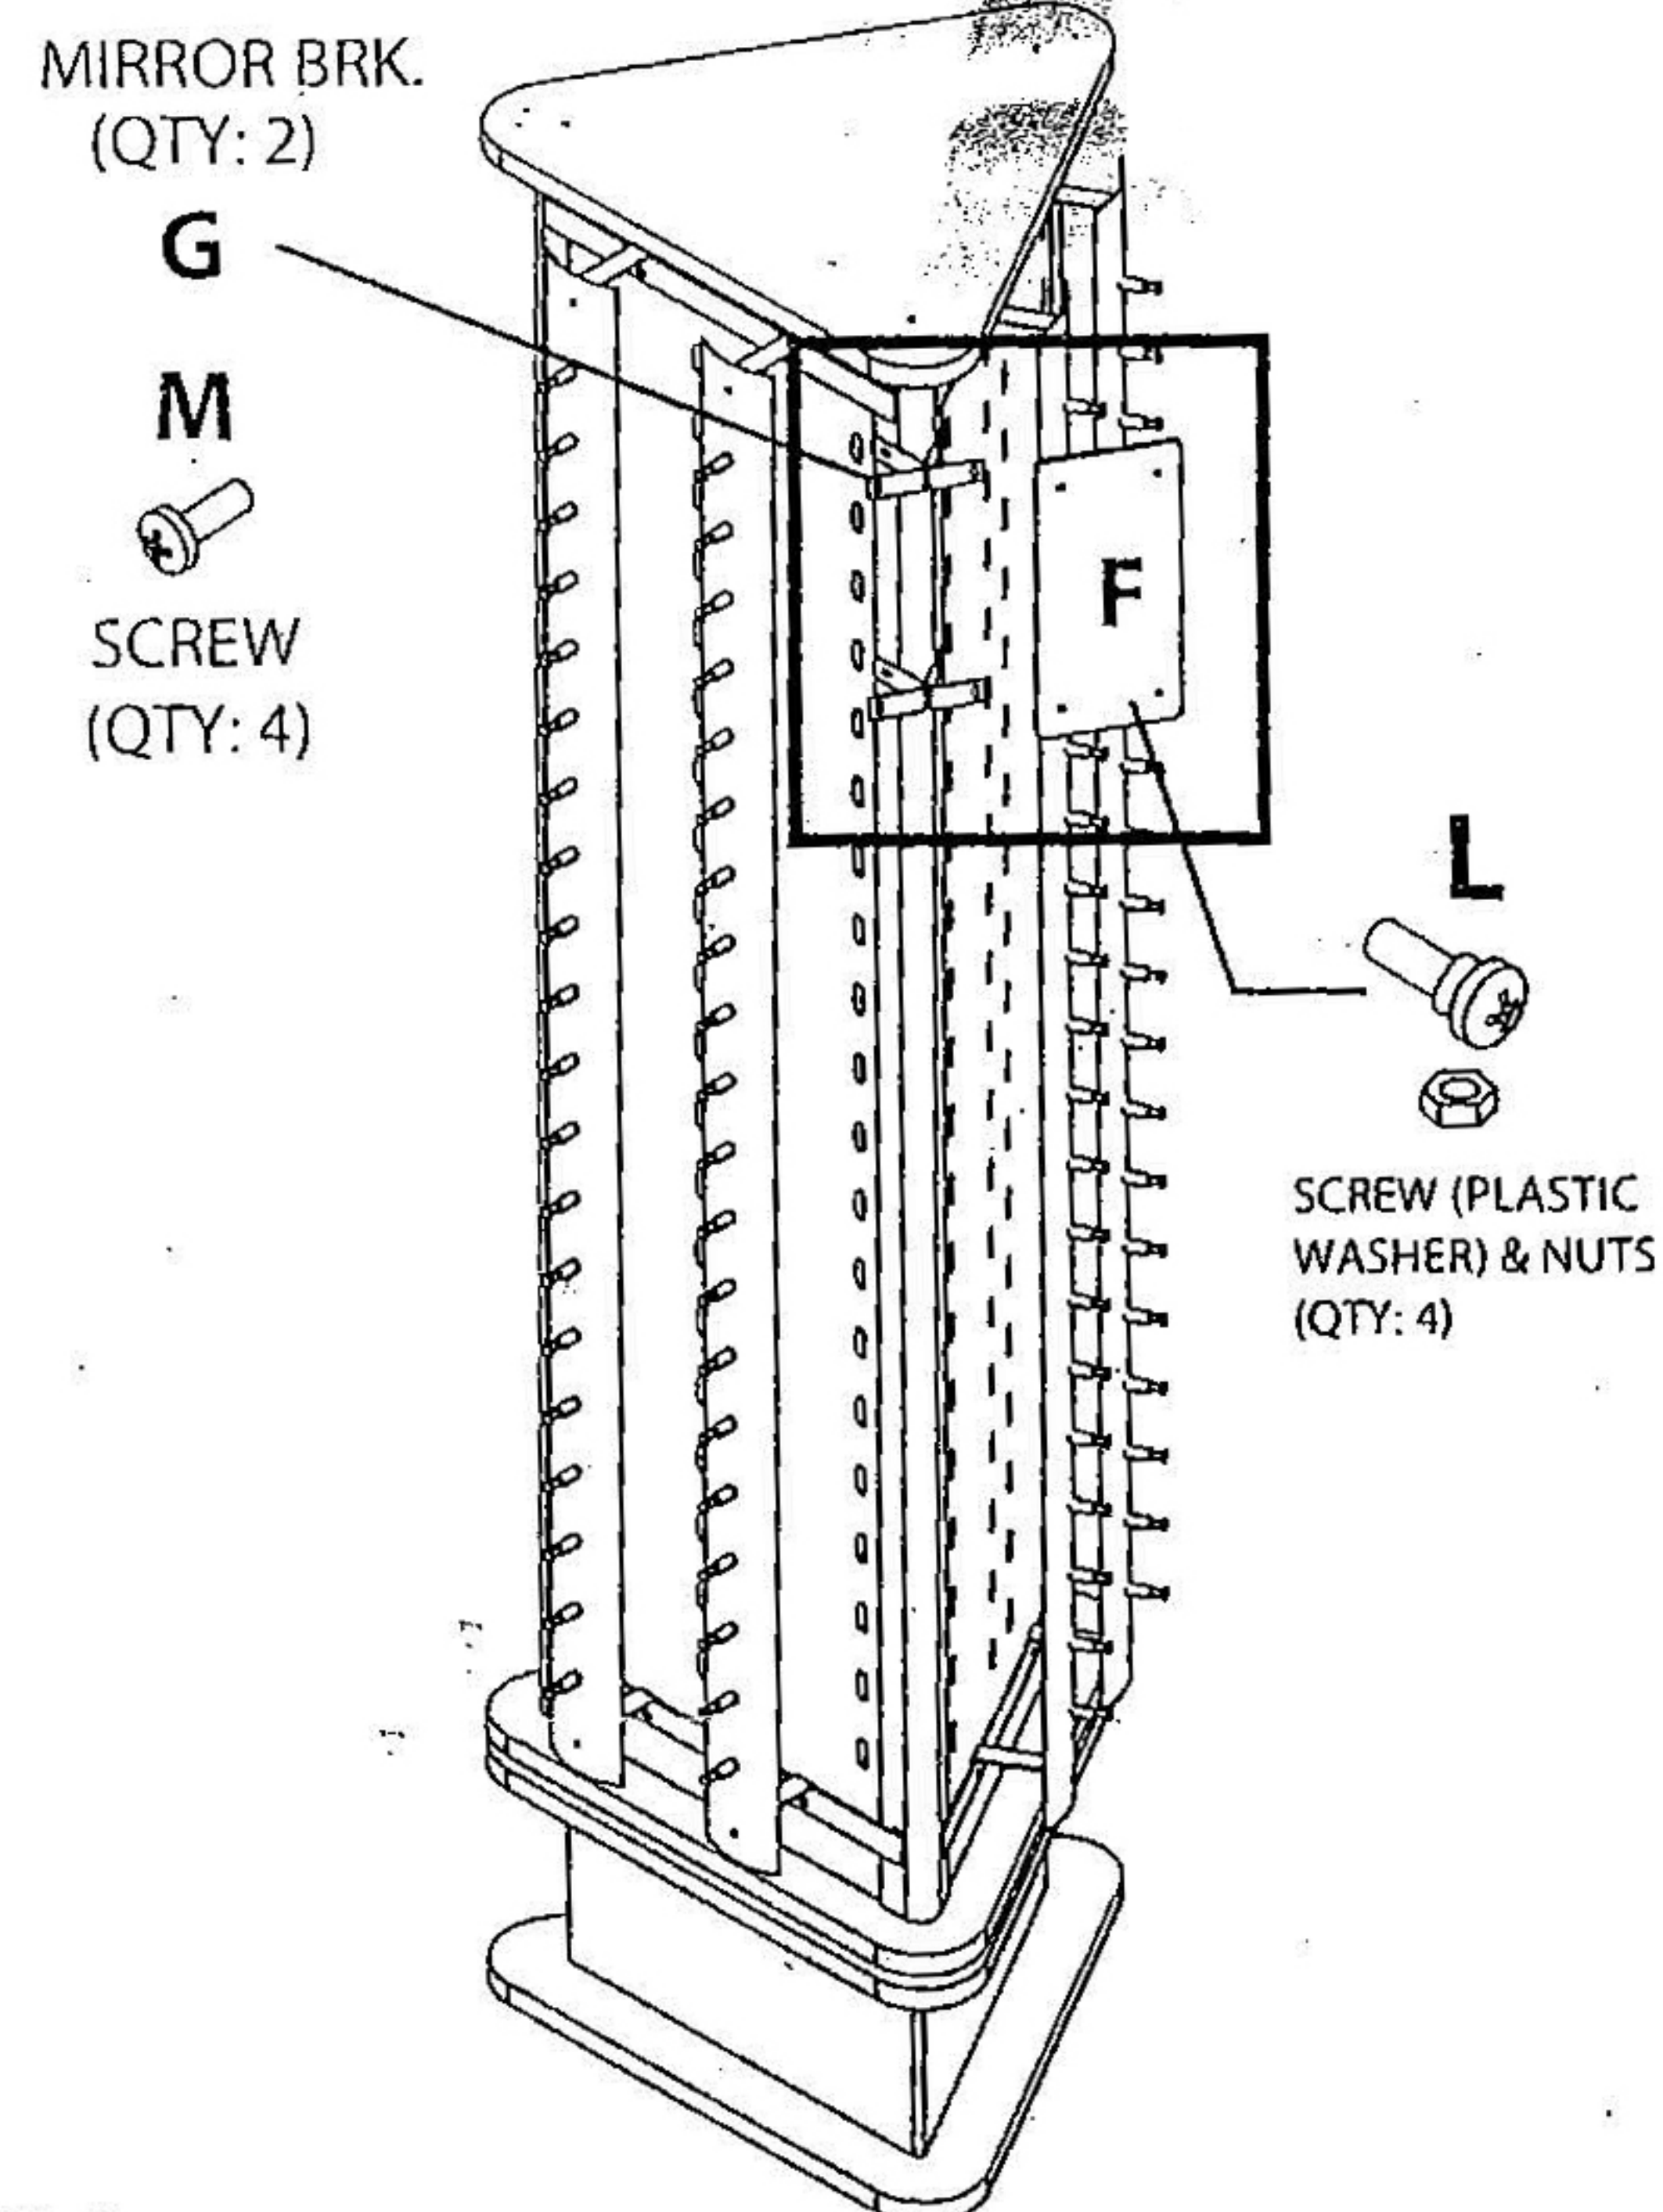

STEP 4:
ADD MIRROR BRK (G) TO FRAME WITH (M) SCREWS.
FASTEN MIRROR (F) WITH (L) SCREWS AND NUTS. THESE
SCREWS HAVE A PLASTIC WASHER ON THEM.

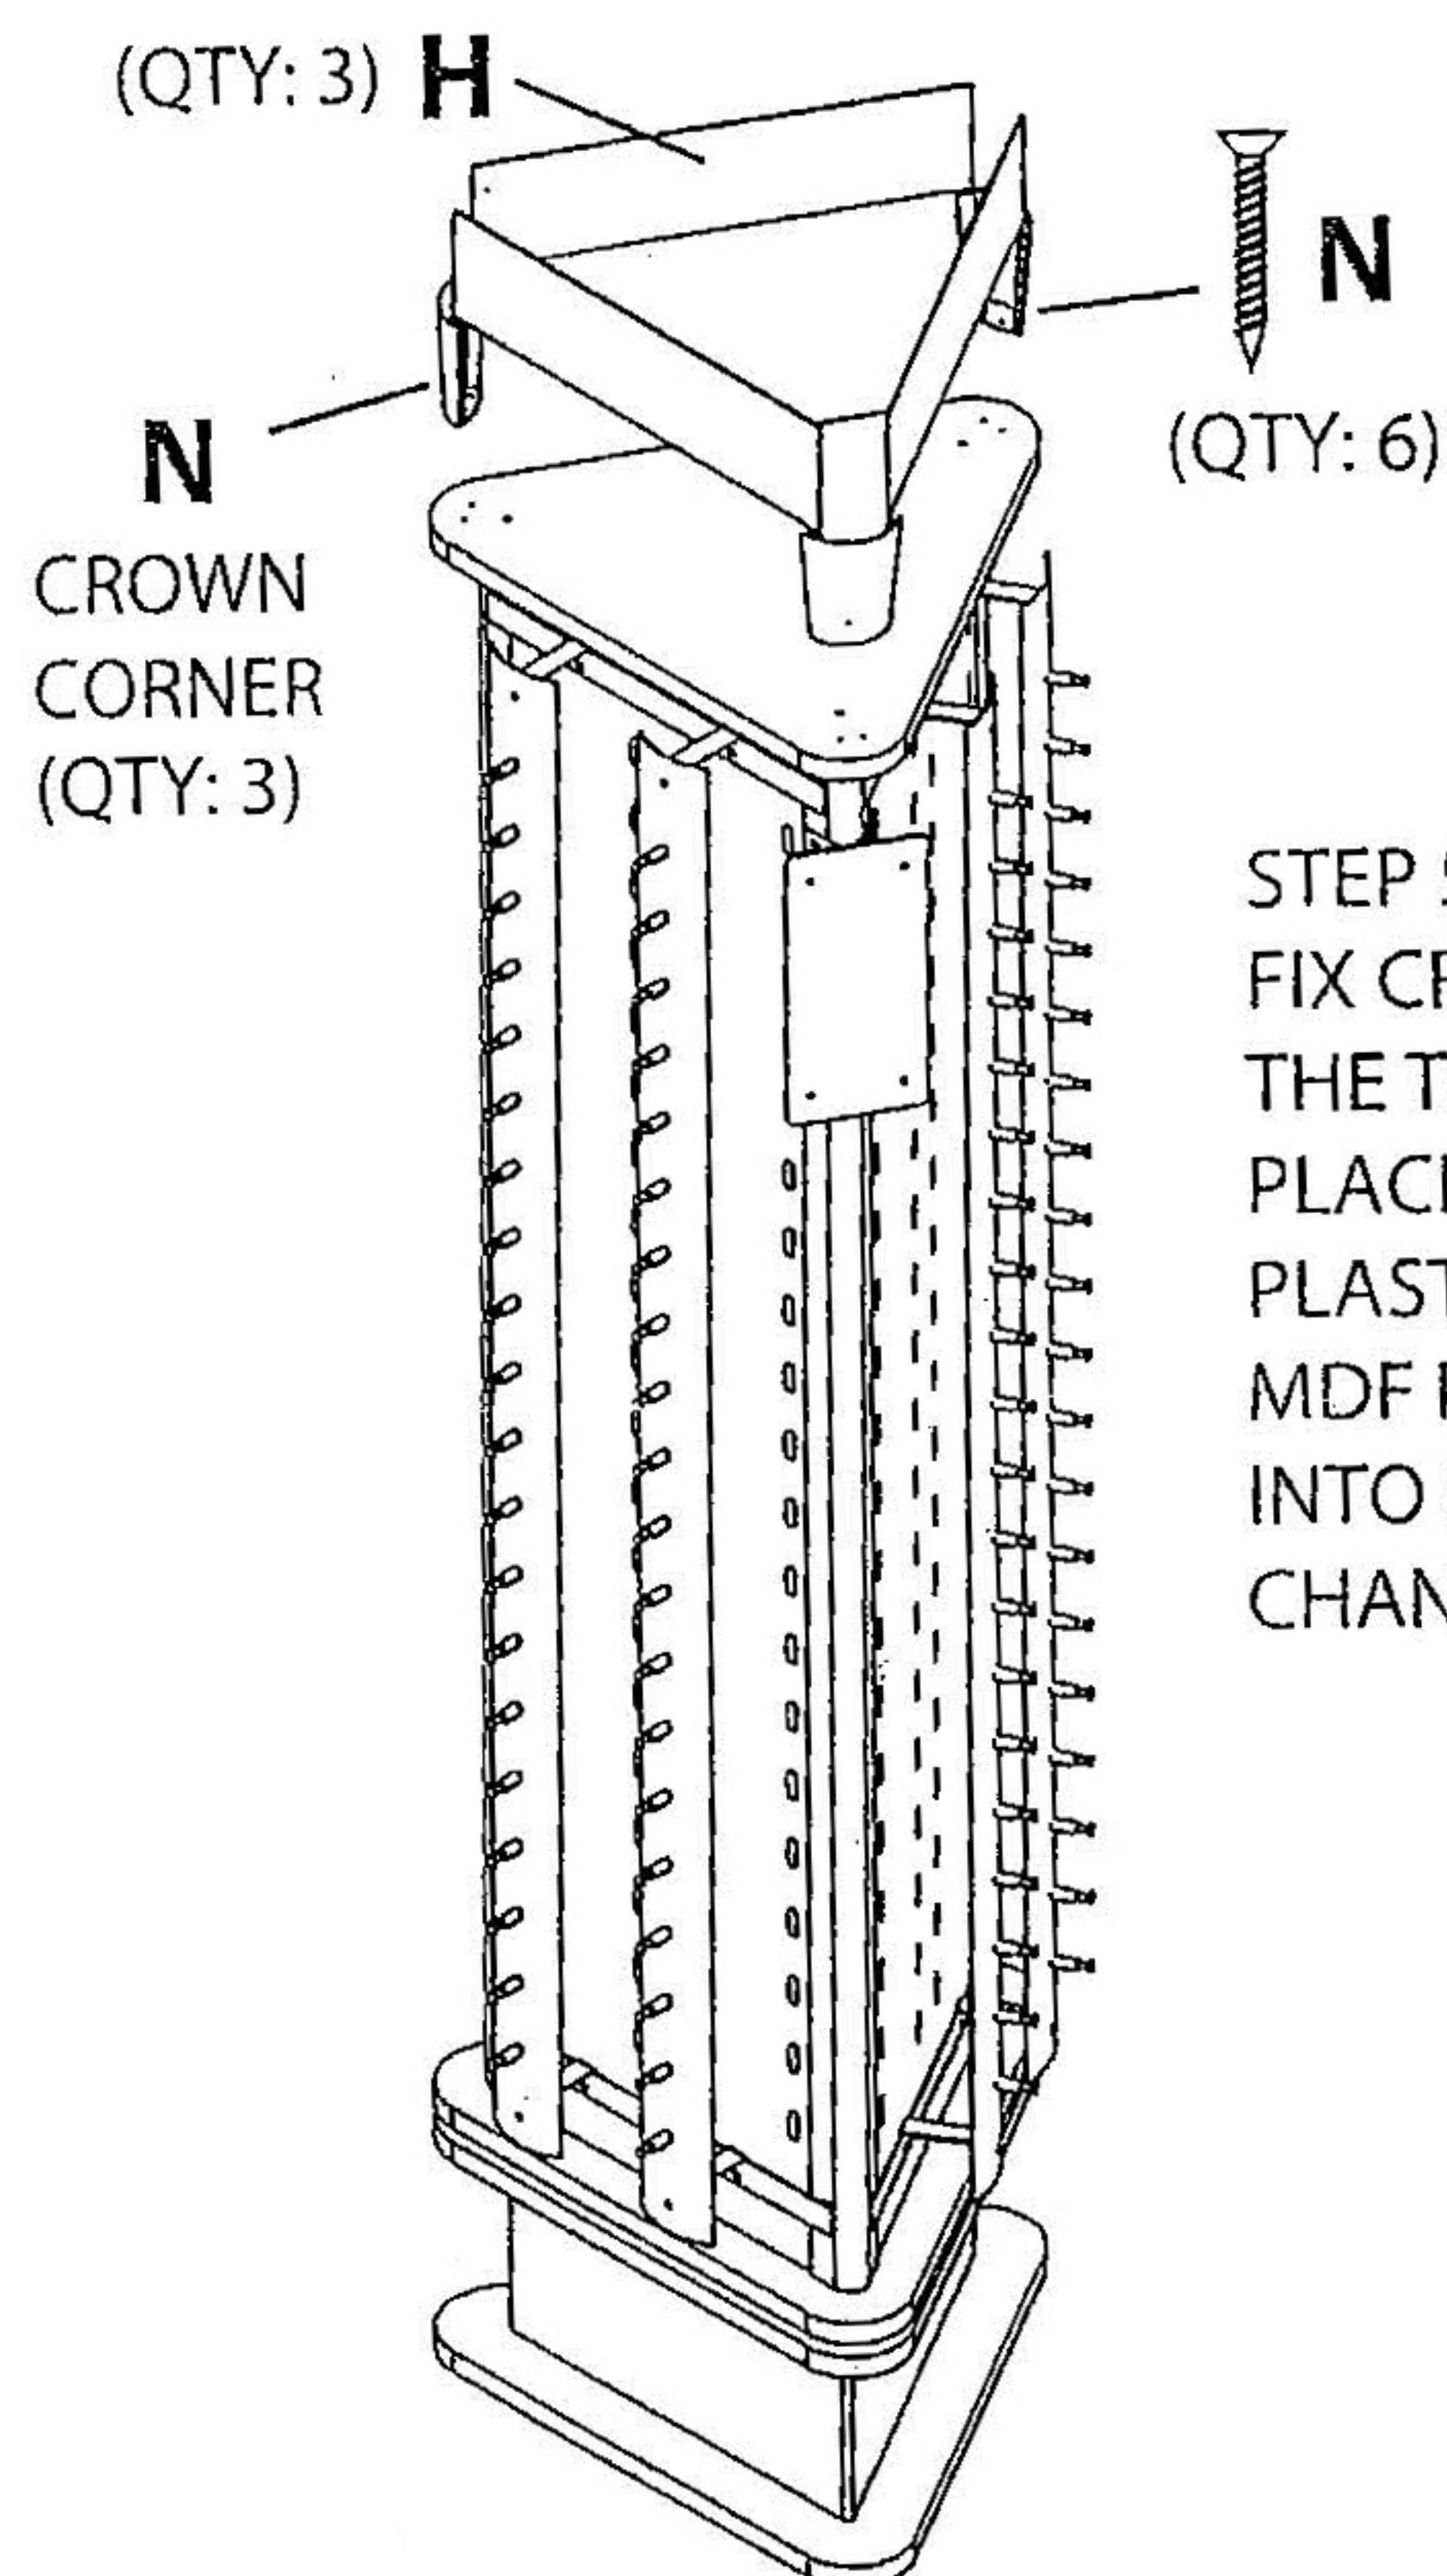

STEP 5:
FIX CROWN BRACKETS (N) TO
THE TOP WITH (N) SCREWS.
PLACE TOP SIGN IN CLEAR
PLASTIC SLEEVE (H) WITH
MDF PANEL AND SLIDE
INTO CROWN CORNER
CHANNELS.

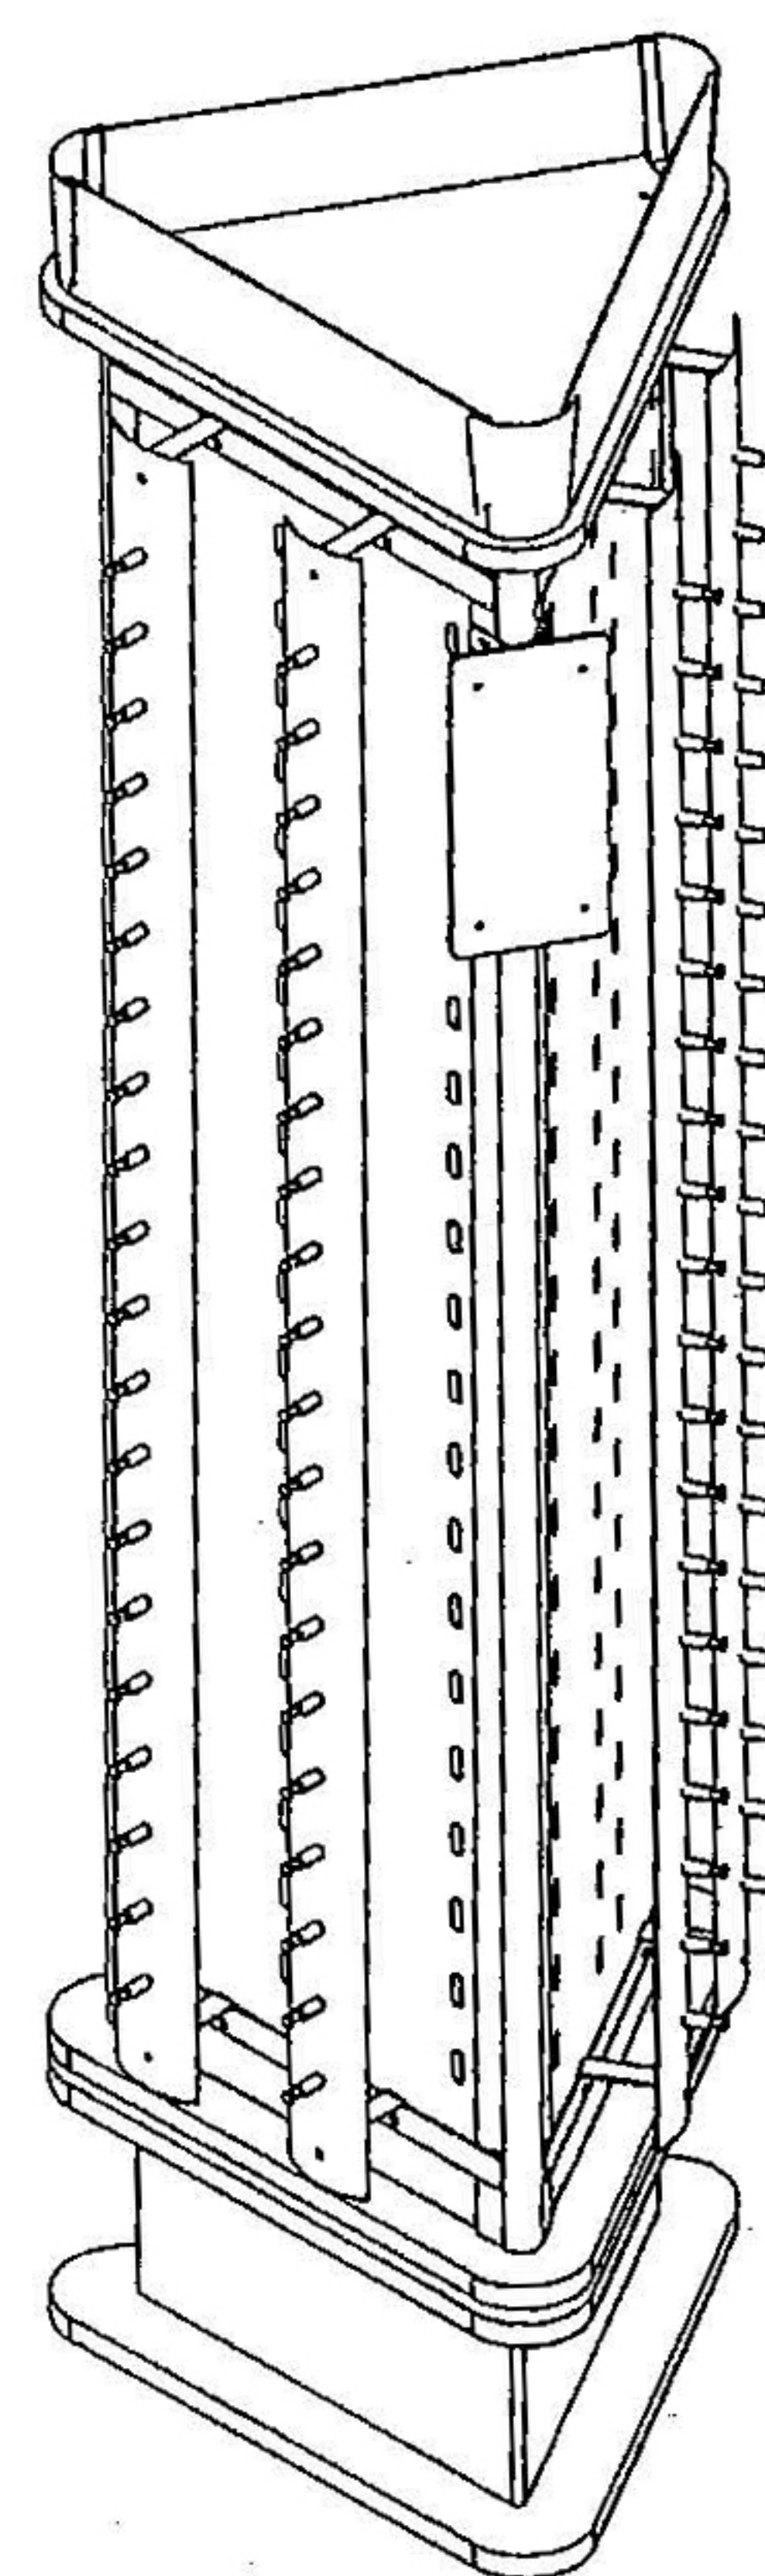

ASSEMBLED UNIT

9487 Assembly Instructions

Page 1 of 2

Assembly parts list:

C
NOSE PANELS
(QTY: 6)

B
FRAME
(QTY: 3)

N
PANEL
(QTY: 3)

A BASE (QTY: 1)

H CROWN SLEEVE (QTY: 3 EACH)

CLEAR PLASTIC

PRINTED PVC

D TOP LID (QTY: 1)

MIRROR (QTY: 1)

E NOSE PANEL BRK.
(QTY: 6)

F

G MIRROR BRK.
(QTY: 2)

N CROWN CORNER
(QTY: 3)

SCREW (QTY: 6)

HARDWARE


K SCREW (QTY: 6)

L SCREW W.
PLASTIC WASHER (QTY: 4)

SCREW (QTY: 12)


NUTS (QTY: 4)

M SCREW (QTY: 4)

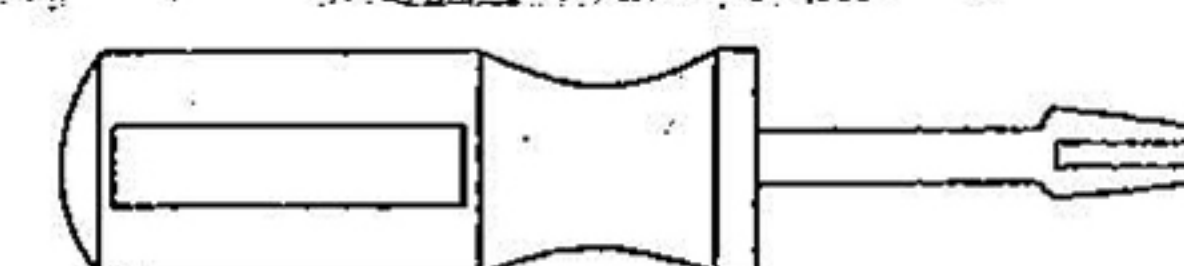

PHILIPS SCREW
DRIVER (QTY: 1)

I PLASTIC CLIPS
(QTY: 12)

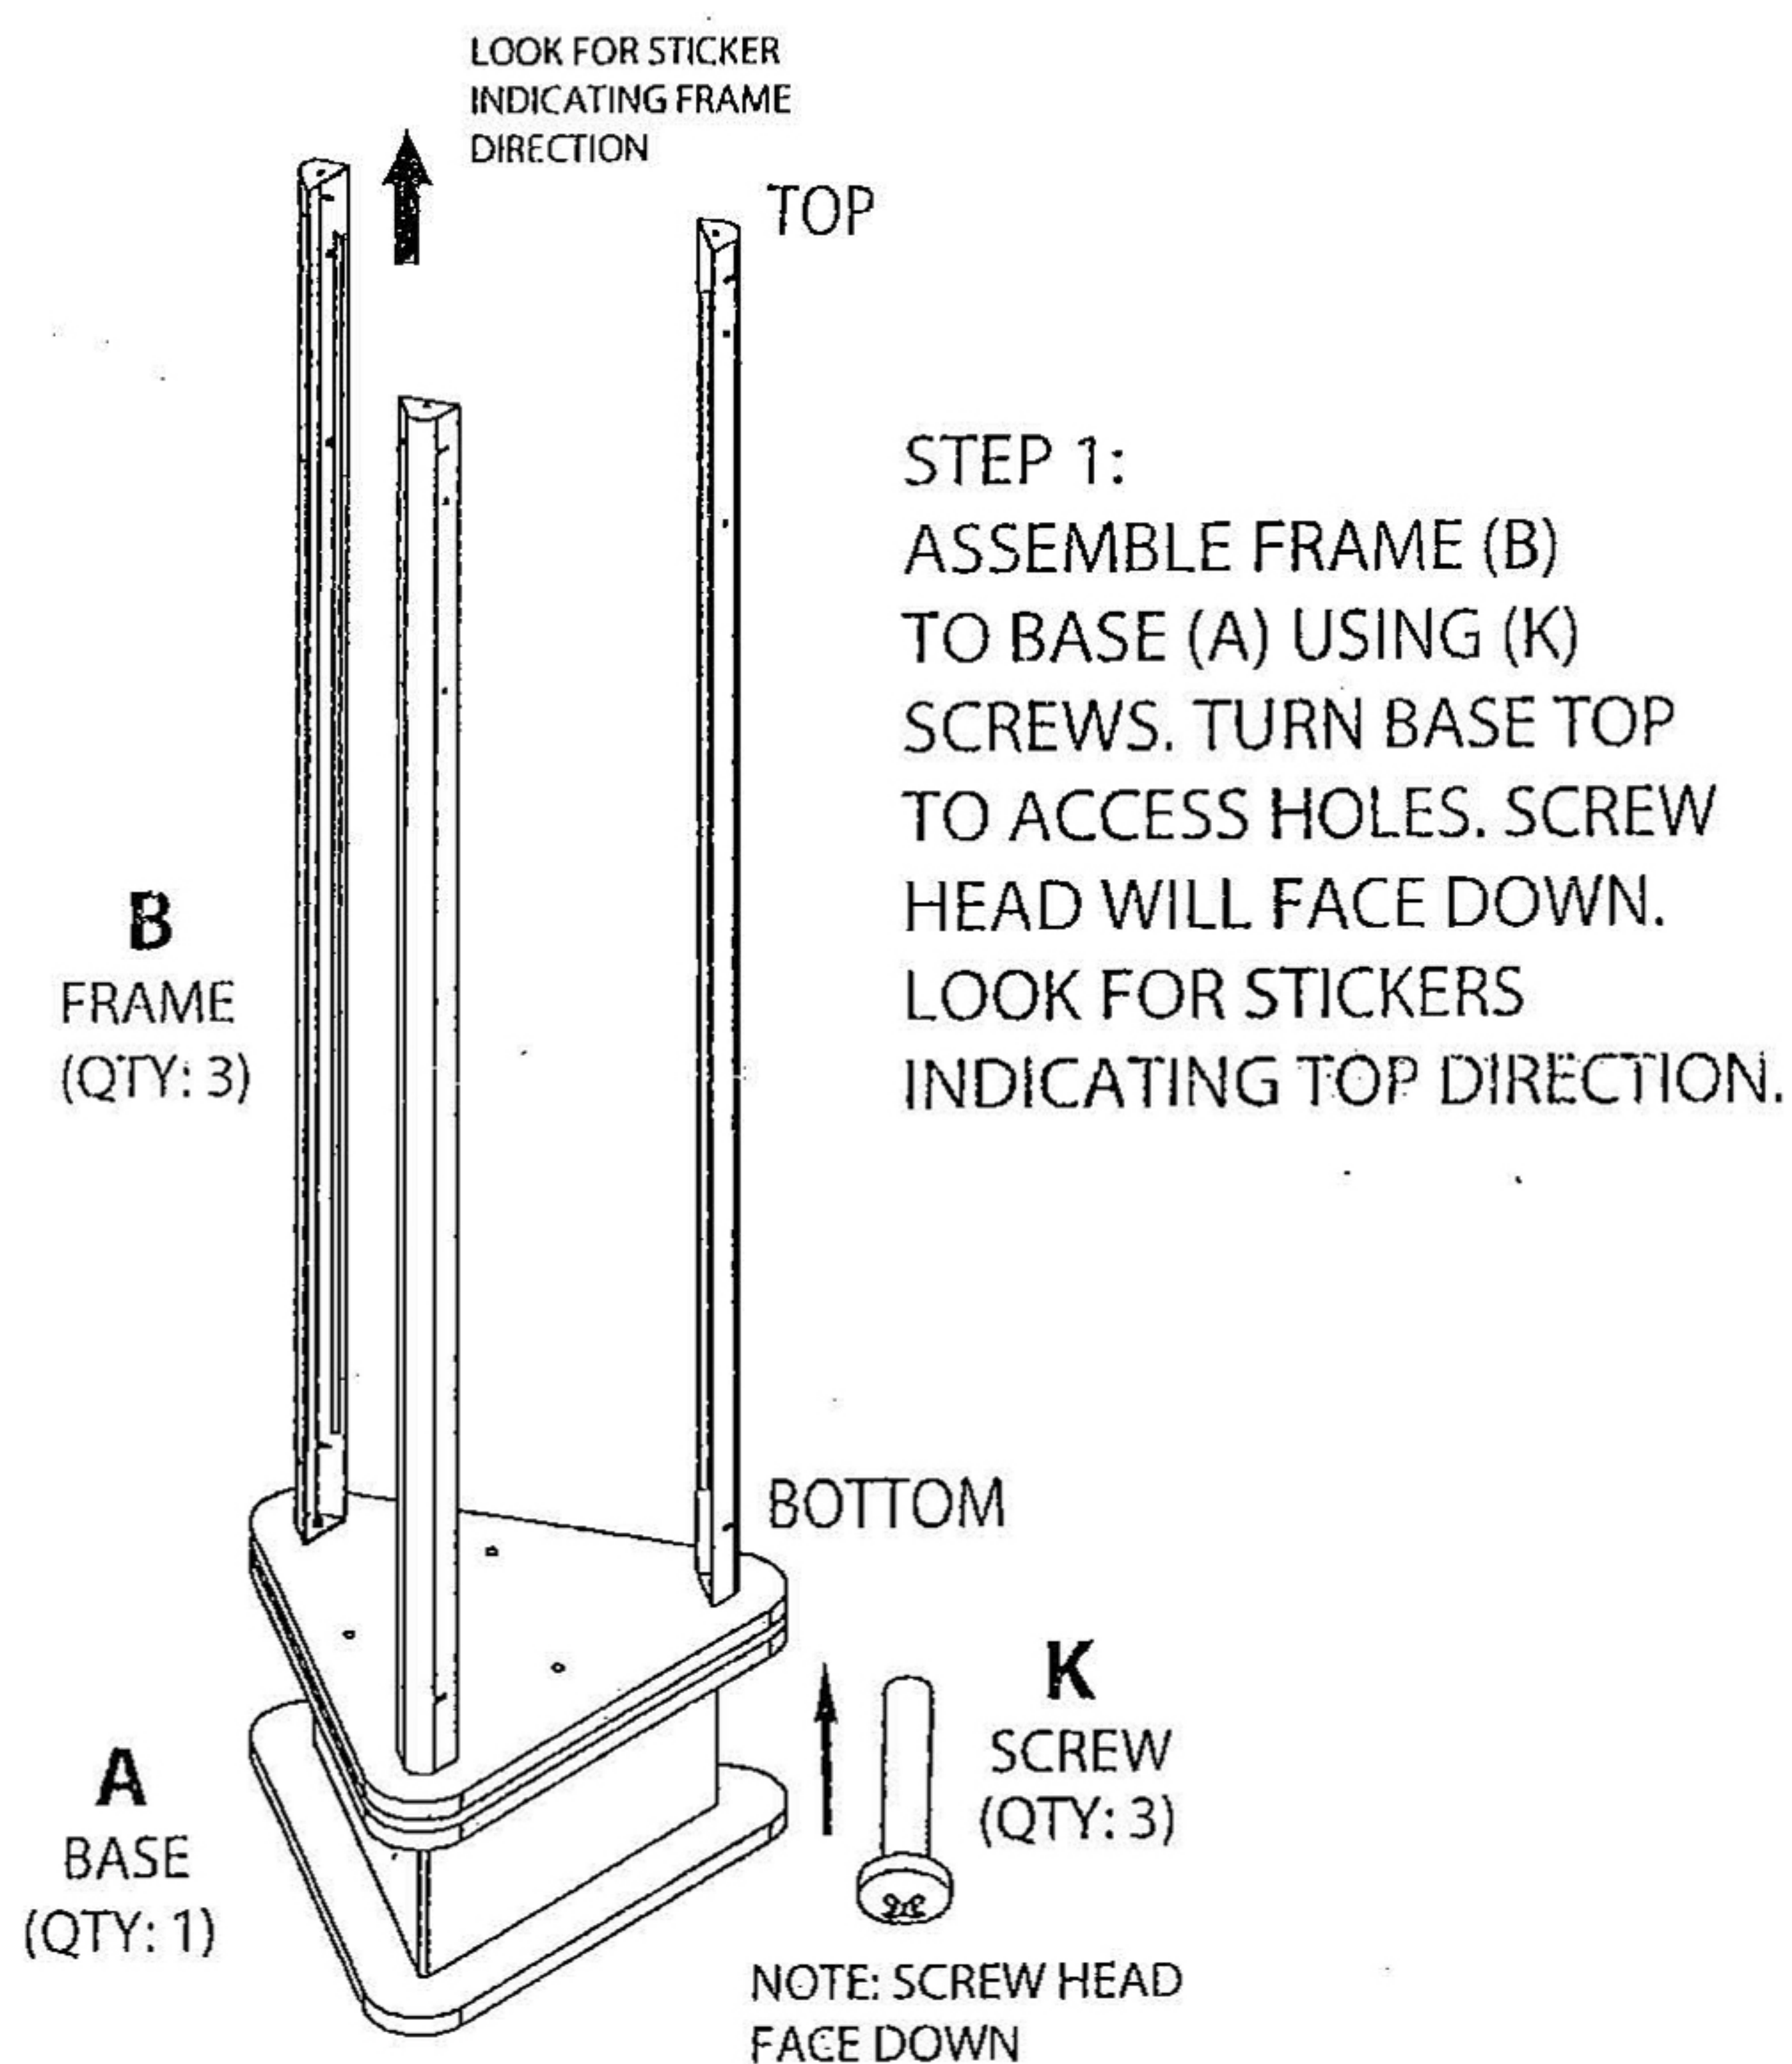

STEP 2:
INSERT PANELS (N) TO
CHANNELS LOCATED ON
FRAMES. ADD NOSE PANEL
BRK (E) TO KEEP
STRUCTURE TOGETHER.
FINALLY, FASTEN
PLASTIC CLIPS (I) TO
PANELS AND BRACKETS.

