

**Tape Specification: To be used with  $\frac{3}{8}$  inch or  $\frac{1}{2}$  inch wide tape**

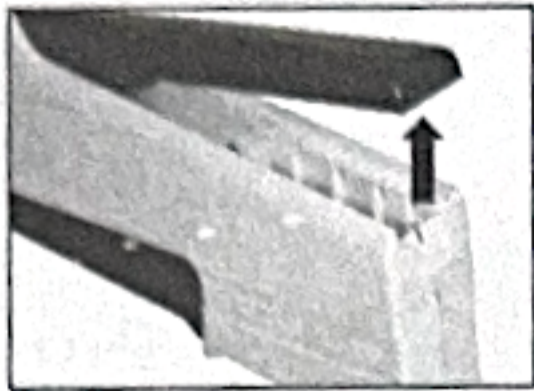


Figure 1

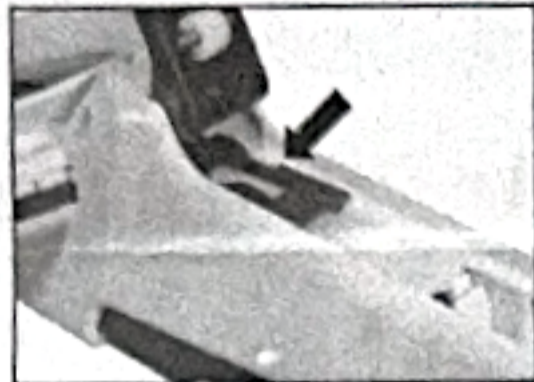


Figure 2

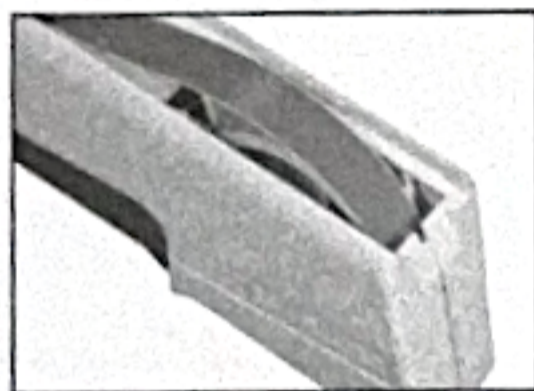


Figure 3

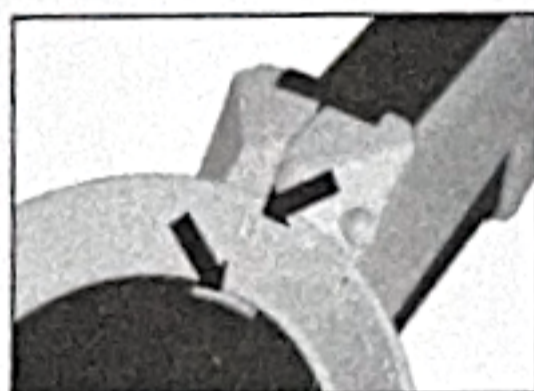


Figure 4

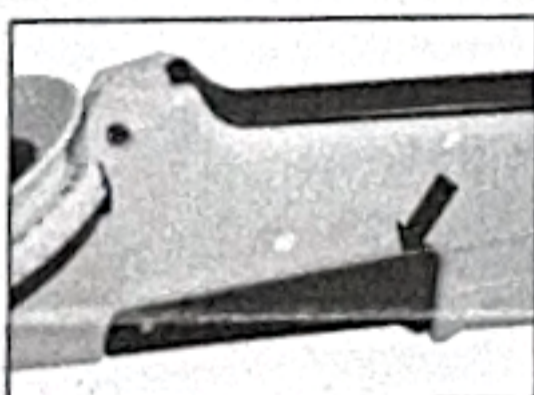


Figure 5

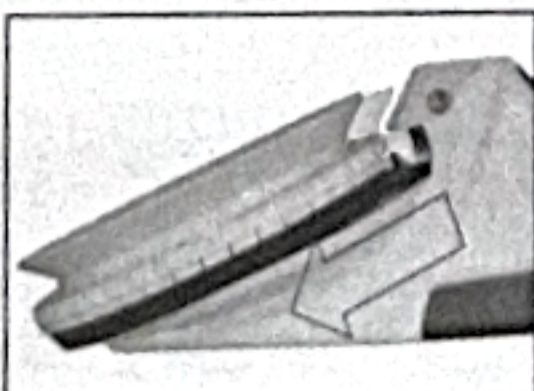


Figure 6



Figure 7

## Loading/Reloading Vinyl Labeling Tape

1. Lift handle cover located at the top of the handle (figure 1).
2. Before placing tape roll into tape compartment, pull several inches of tape out and feed it by hand into braille labeling guide (figure 2).
3. Place vinyl labeling tape into tape compartment located in handle (figure 3).
4. Close handle cover. Labeler is ready to print.

## Imprinting Braille Characters

1. Rotate the circular braille disc to select the braille letter or number until it sits in the opening of the labeling guide (figure 4). Use letters and numbers imprinted on the lower disc to identify corresponding braille signs.
2. Firmly squeeze and then release the trigger on the handle (figure 5) to make impression of the selected character. In order to create a blank space or to advance tape, lightly squeeze the trigger until you hear an audible click, then release the trigger.

## Cutting Vinyl Labeling Tape

1. Rotate the circular braille disc until the rectangle shape sits in the opening of the labeling guide (figure 4)
2. Firmly squeeze and then release the trigger on the handle (figure 5) to cut Labeling tape.
3. Advance labeling tape (lightly squeeze the trigger until you hear an audible click, then release the trigger) several spaces to remove cut tape.

## Removing Circular Braille Disc

1. Remove labeling tape from labeler by opening handle cover at the top of the handle (figure 1)
2. Firmly hold circular braille disc on both sides and pull circular braille disk approximately  $\frac{1}{4}$  inch away from the handle (figure 6).
3. Lift up circular braille disk and remove.


## Installing Circular Braille Disc

1. Align small tab located at the bottom of the circular braille disk with labeling guide (figure 7) and gently push the disk toward the handle until it snaps back into position.
2. Load vinyl labeling tape into labeler by opening handle cover at the top of the handle (figure 1).

**REIZEN™**

REIZEN Inc., P.O.Box 3312, Farmingdale, NY 11735  
www.ReizenUSA.com

Reizen is a Registered Trademark of Reizen, Inc.  
Copyright © 2005 Reizen, Inc. All Rights Reserved.

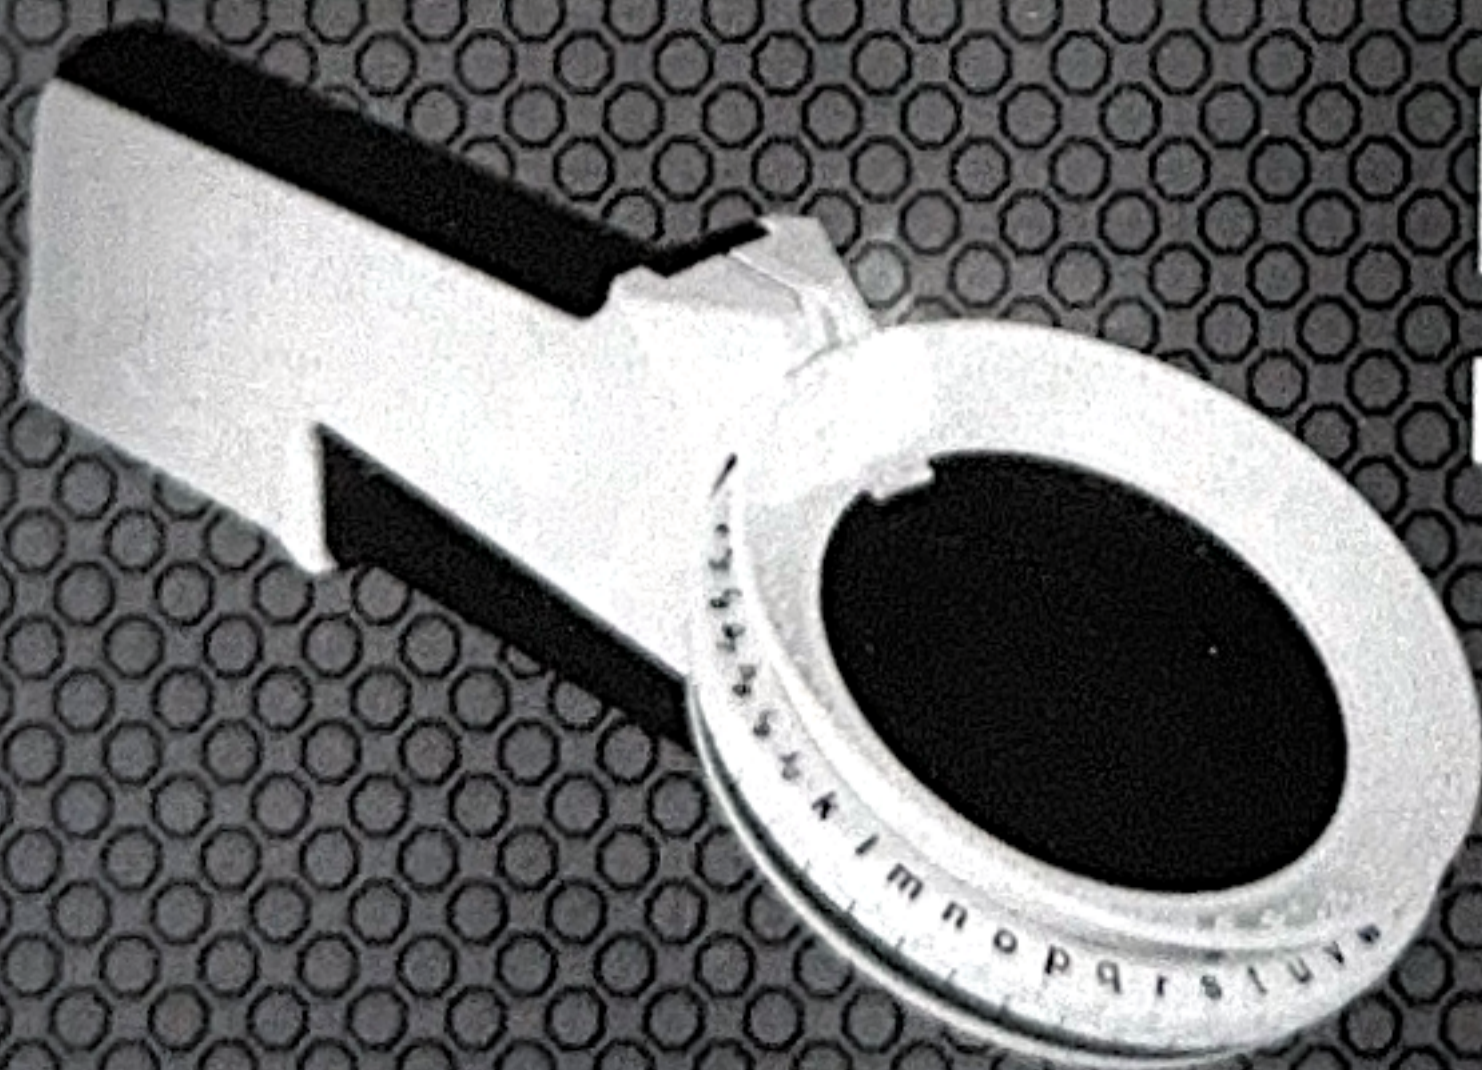

**REIZEN™**  
RL-350 Braille Labeler

**USER'S MANUAL**